



Bespoke Showcase Engineers

**MAX140 Display
Risers Assembly**


Version 1.0

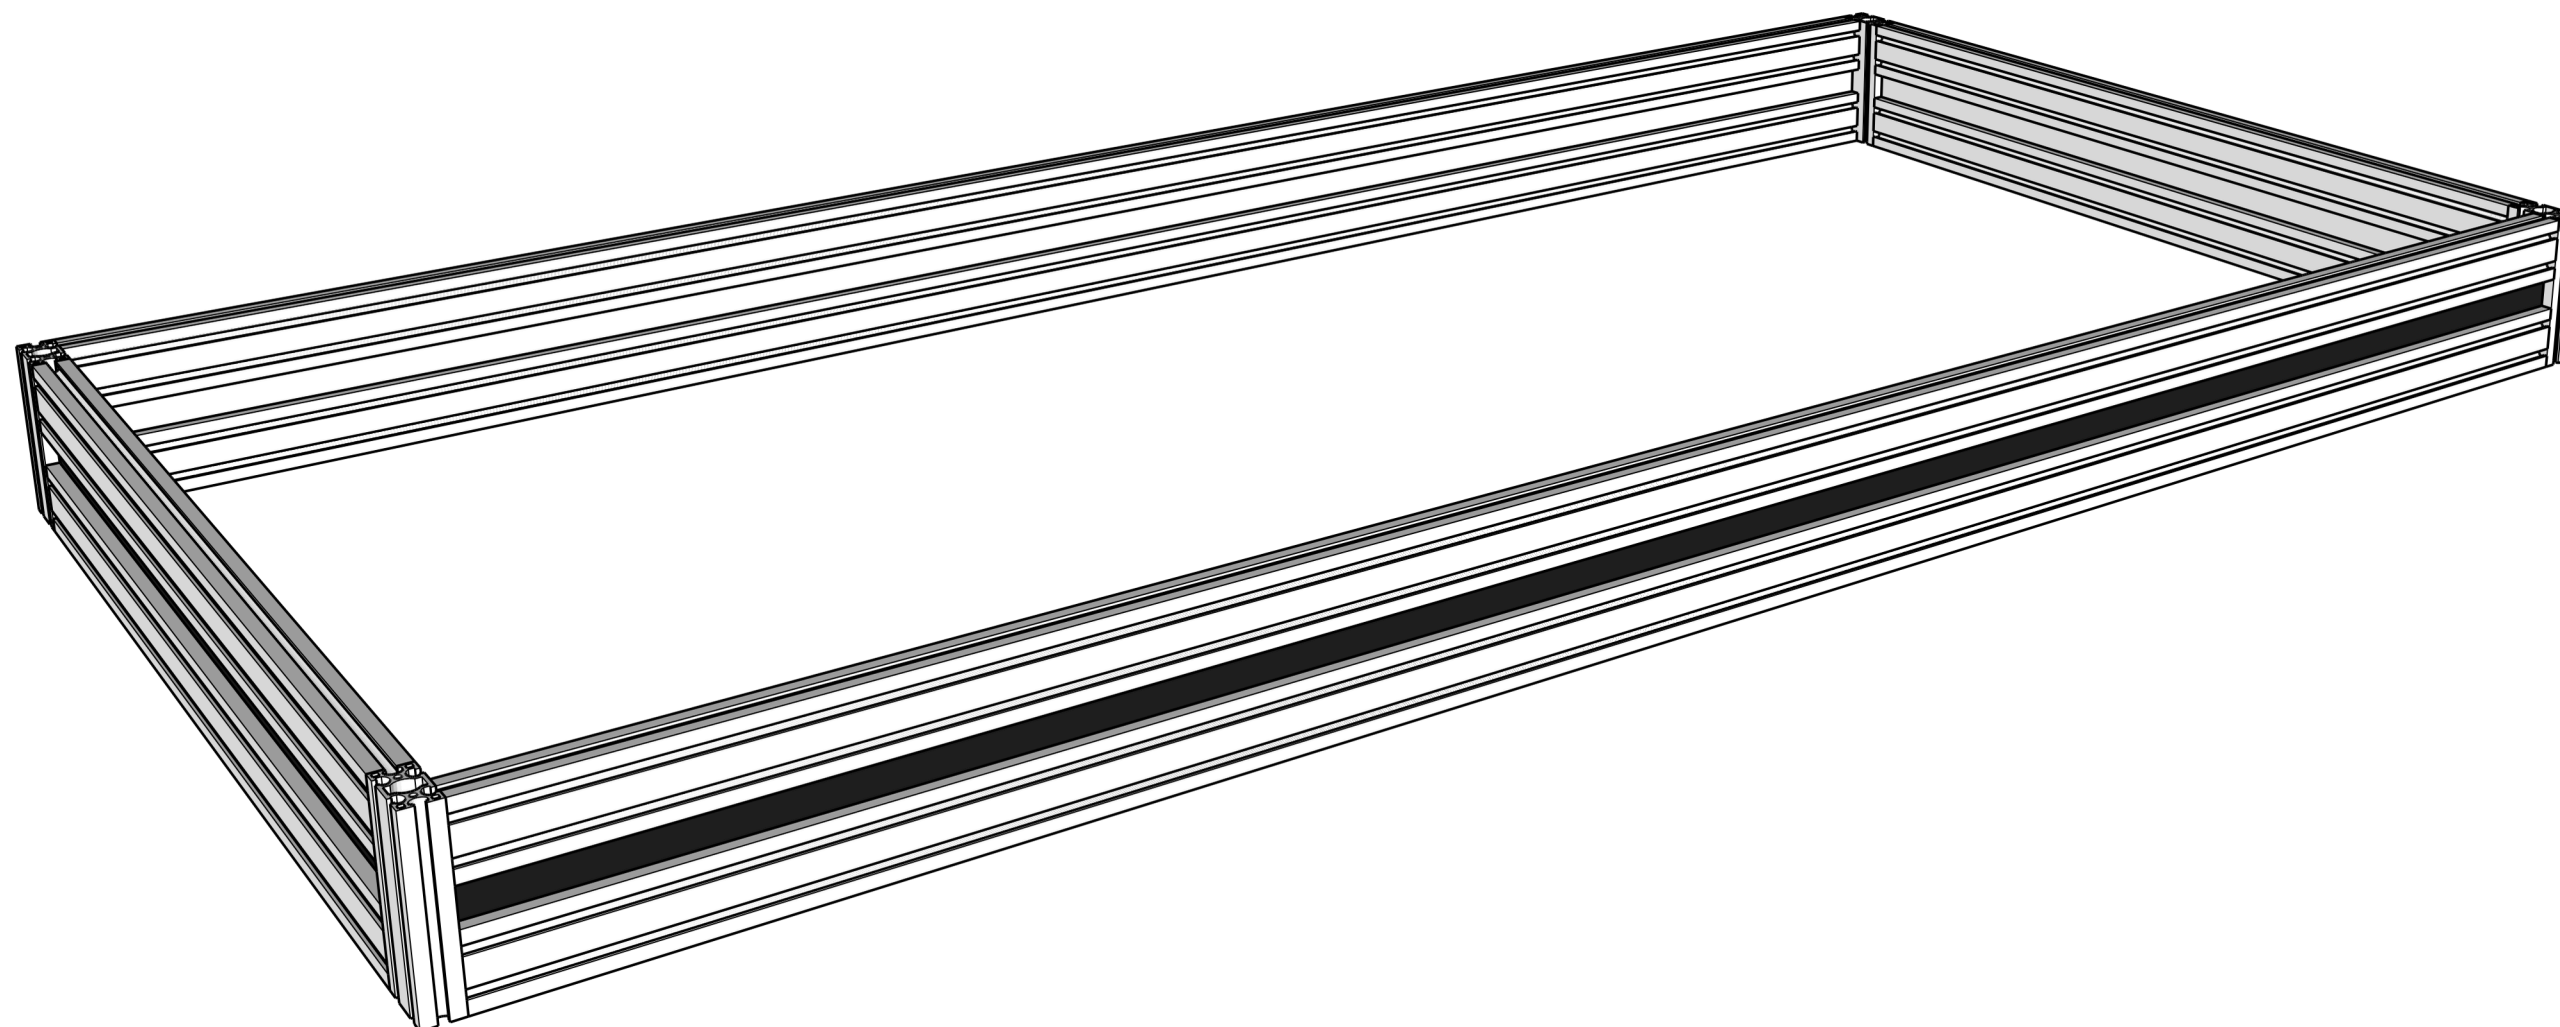


Front / Back Frame
Horizontal Bar x 4

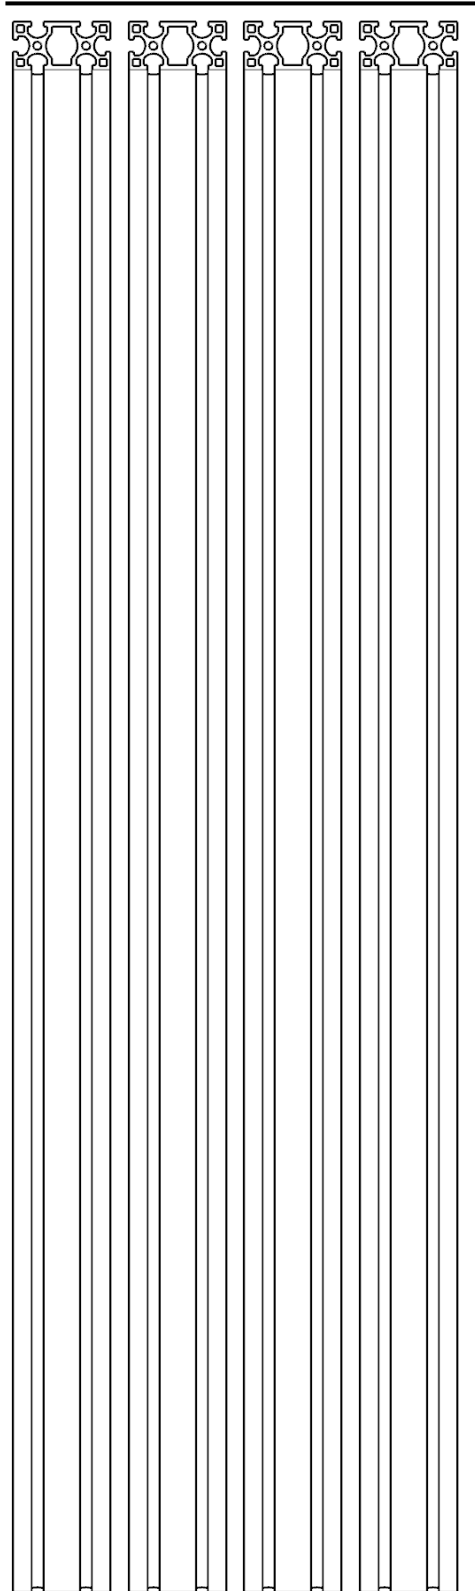


Side Frame
Horizontal Bar x 4

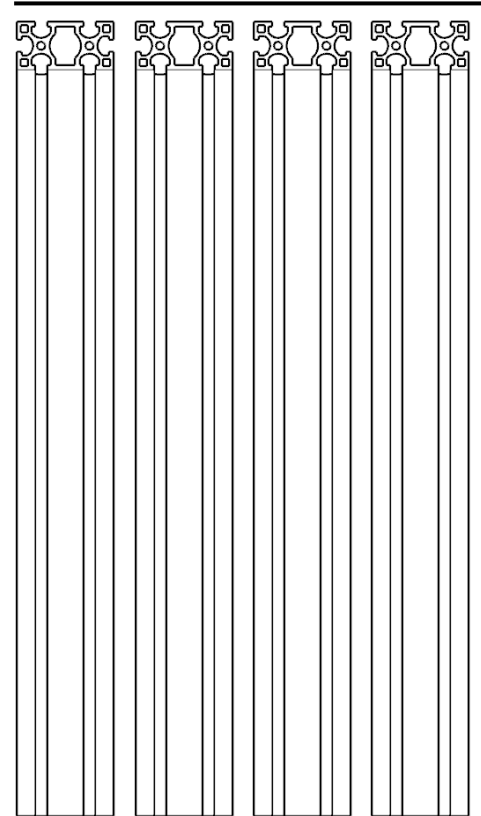

Front / Back Frame
Vertical Bar x 4

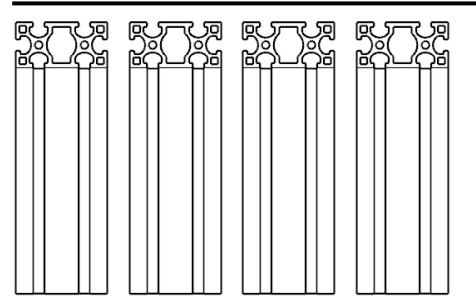

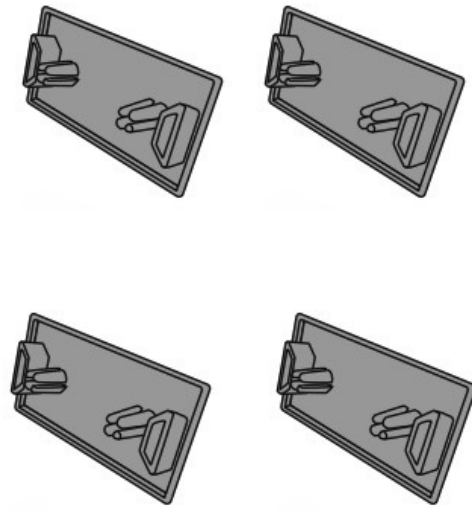

Front/ Back
Frame Foot Pad
x 4



M5 Allen Key x 1



M4 Allen Key x 1




M5-Long
Screws x 35



M5 Washer
x 35



M4 Stacking
Screws x 16

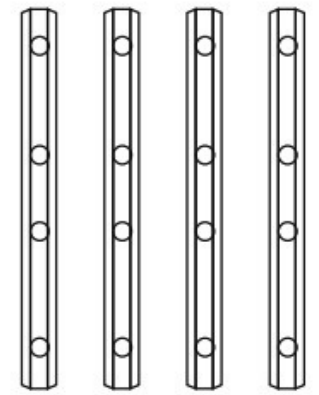

Stacking
Brackets x 4

Side Panel



Side Panel




Back Panel



Front Panel



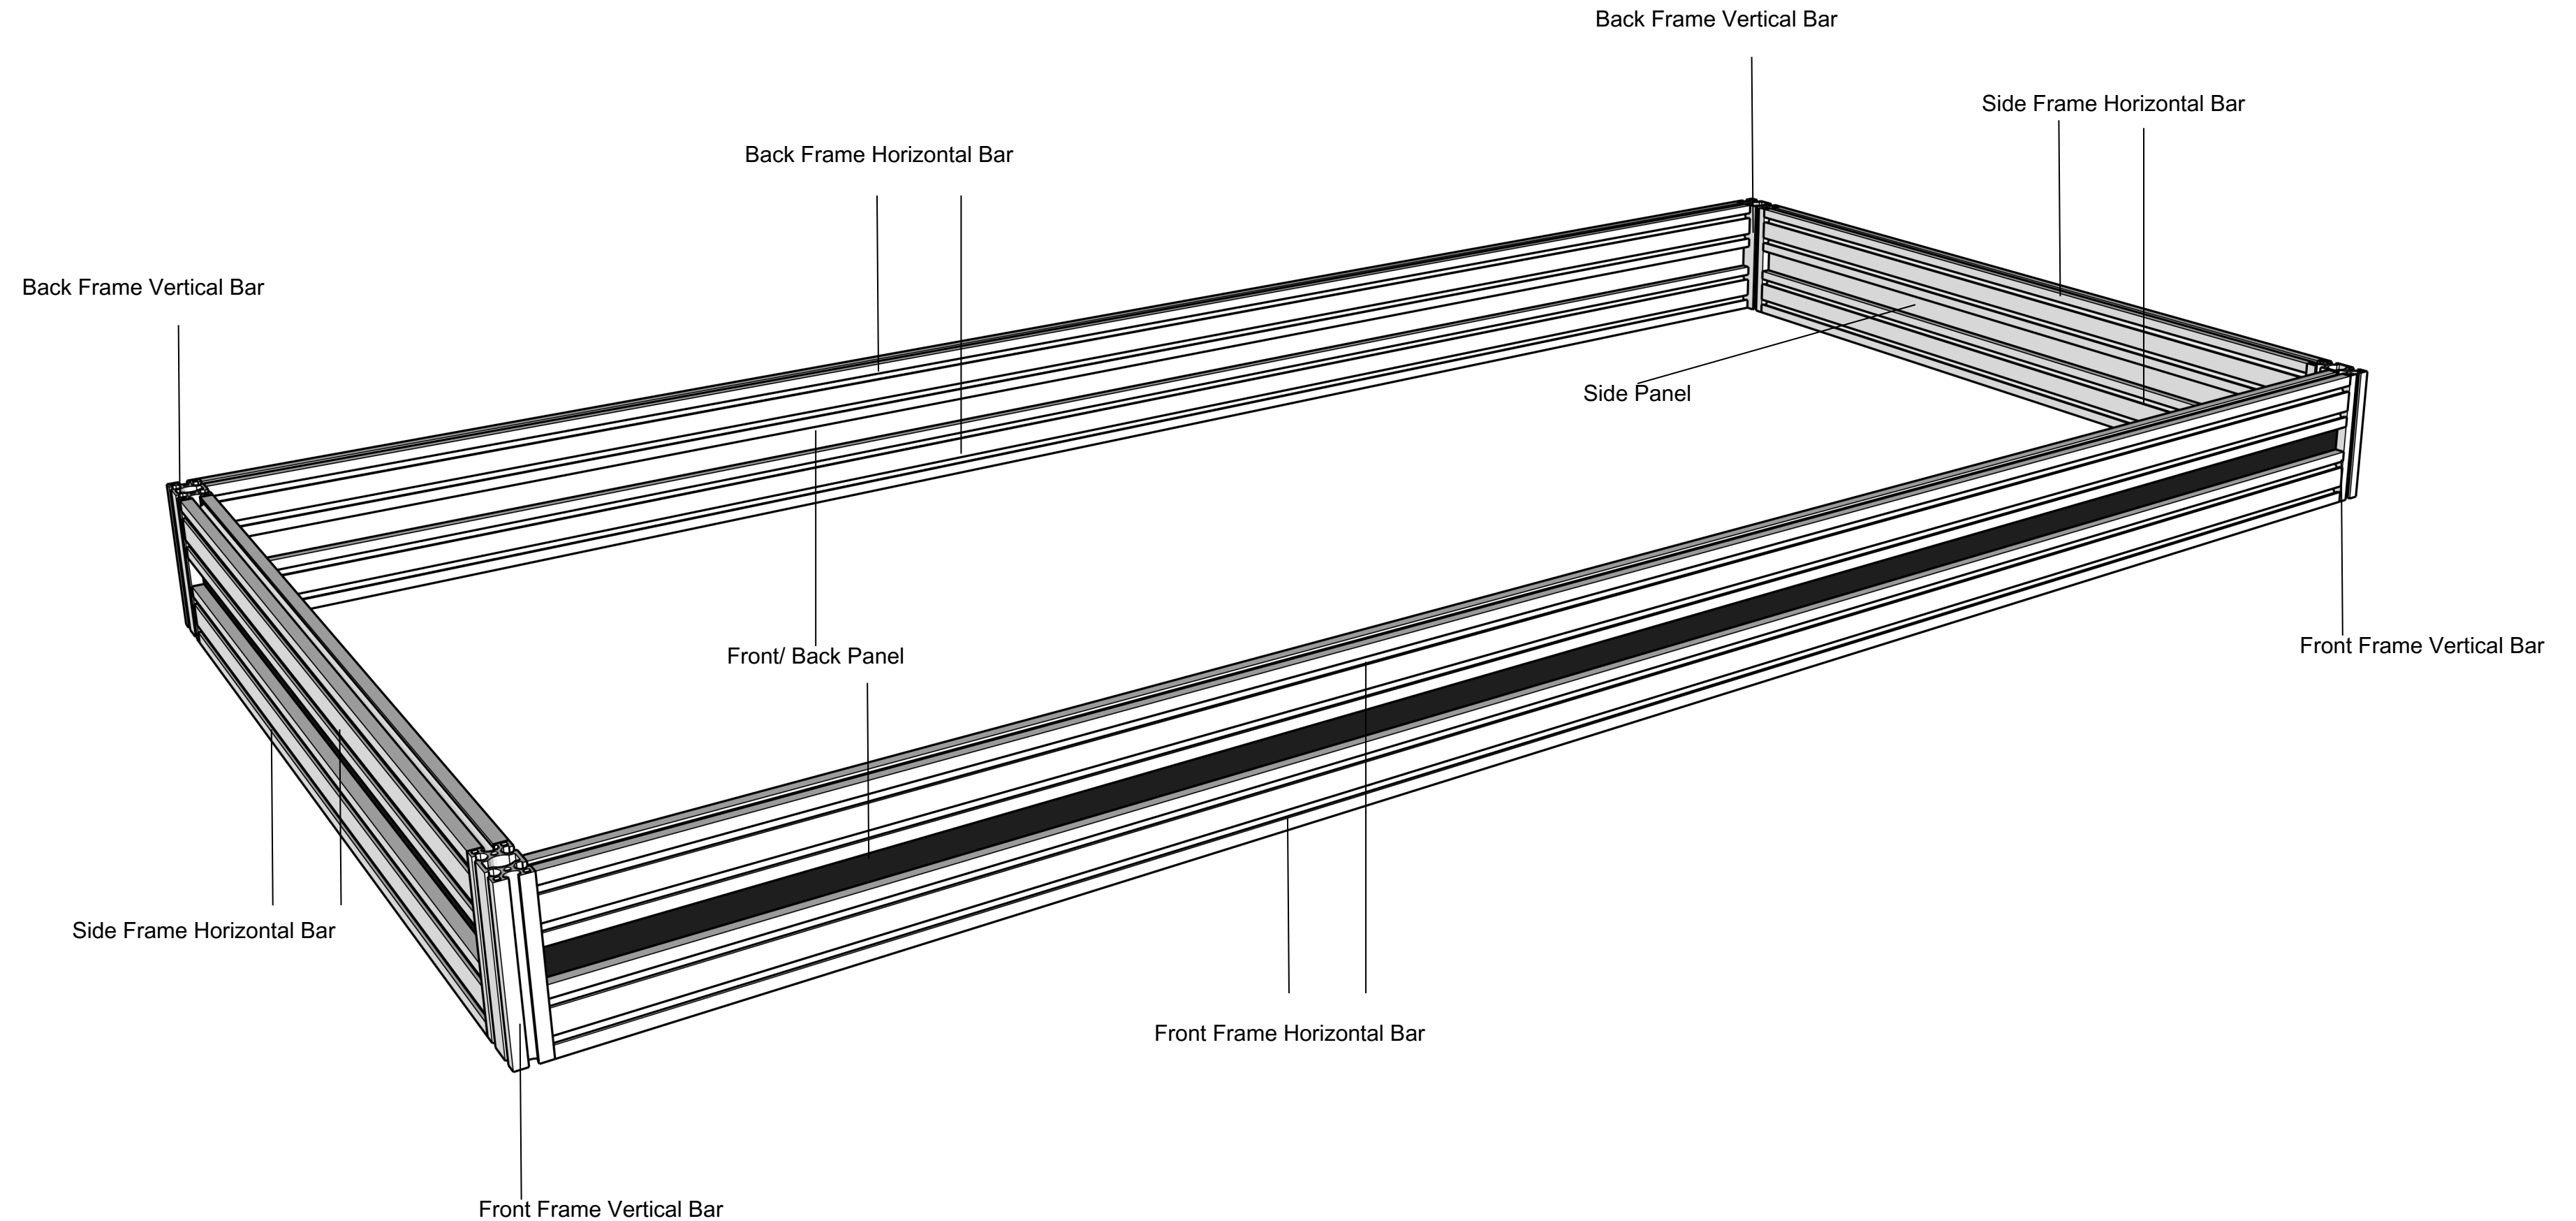




You will need



- M5-Long Screw x 16
- M5-Washer x 16
- Side Frame Horizontal Bars x 4
- Back Frame Horizontal Bars x 2
- Front Frame Horizontal Bars x 2


Steps to insert M5-Long Screw

- Step 1.** Insert the M5-Long Screw fully into the M5-Washer.
- Step 2.** Position the screw with washer into the pilot hole on the left side of the bar. Turn clockwise to tighten the screw. Leave a 15mm gap between the washer and bar.
- Step 3.** Repeat steps 1-2 for the other side of the bar.
- Step 4.** Repeat steps 1-3 for
- Side Frame Horizontal Bars x 4
 - Back Frame Horizontal Bars x 2
 - Front Frame Horizontal Bars x 2

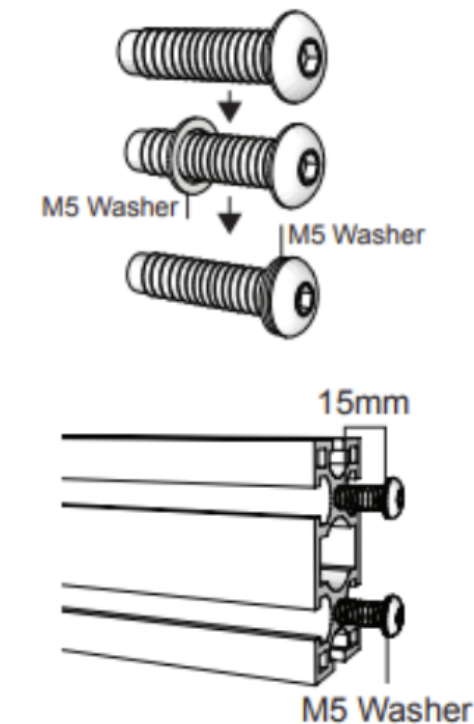

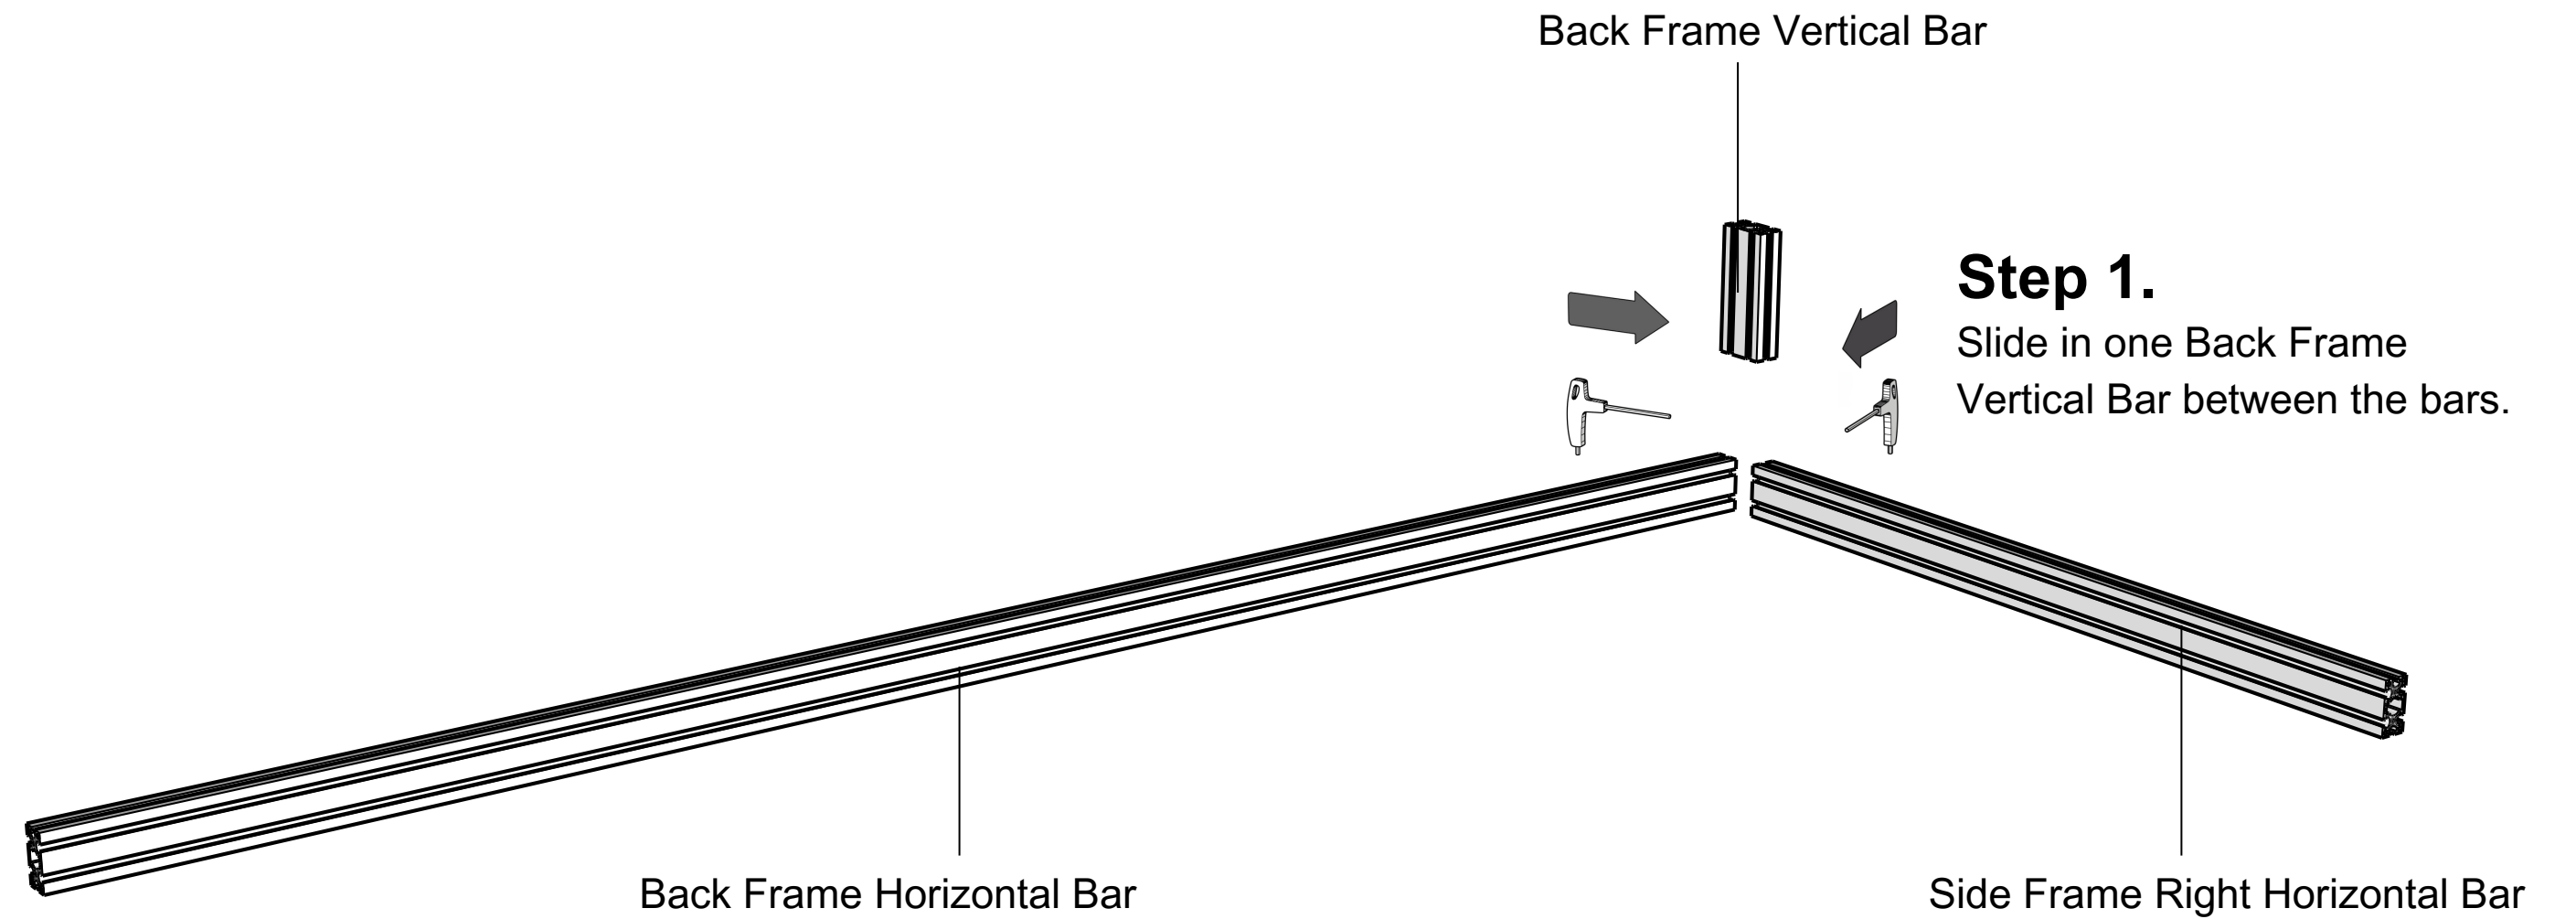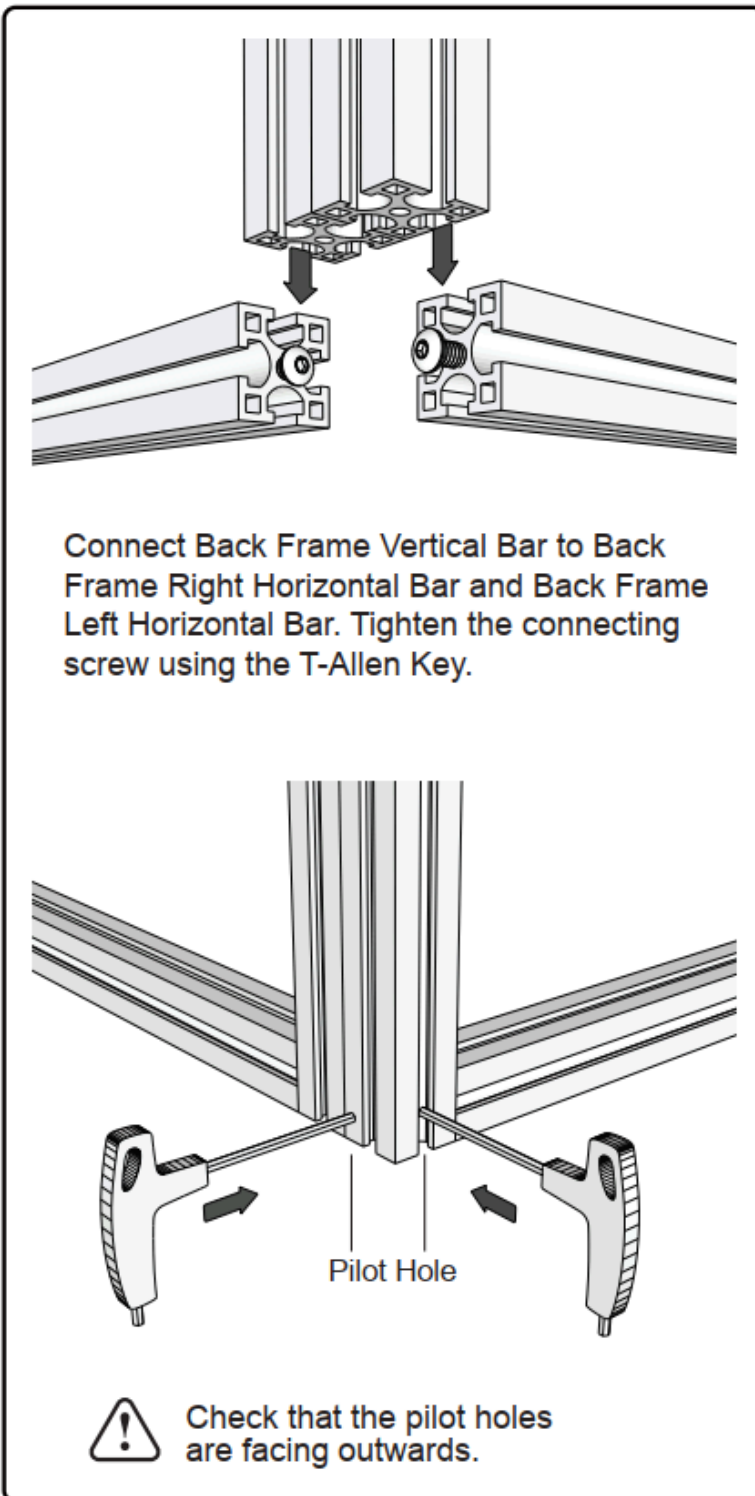

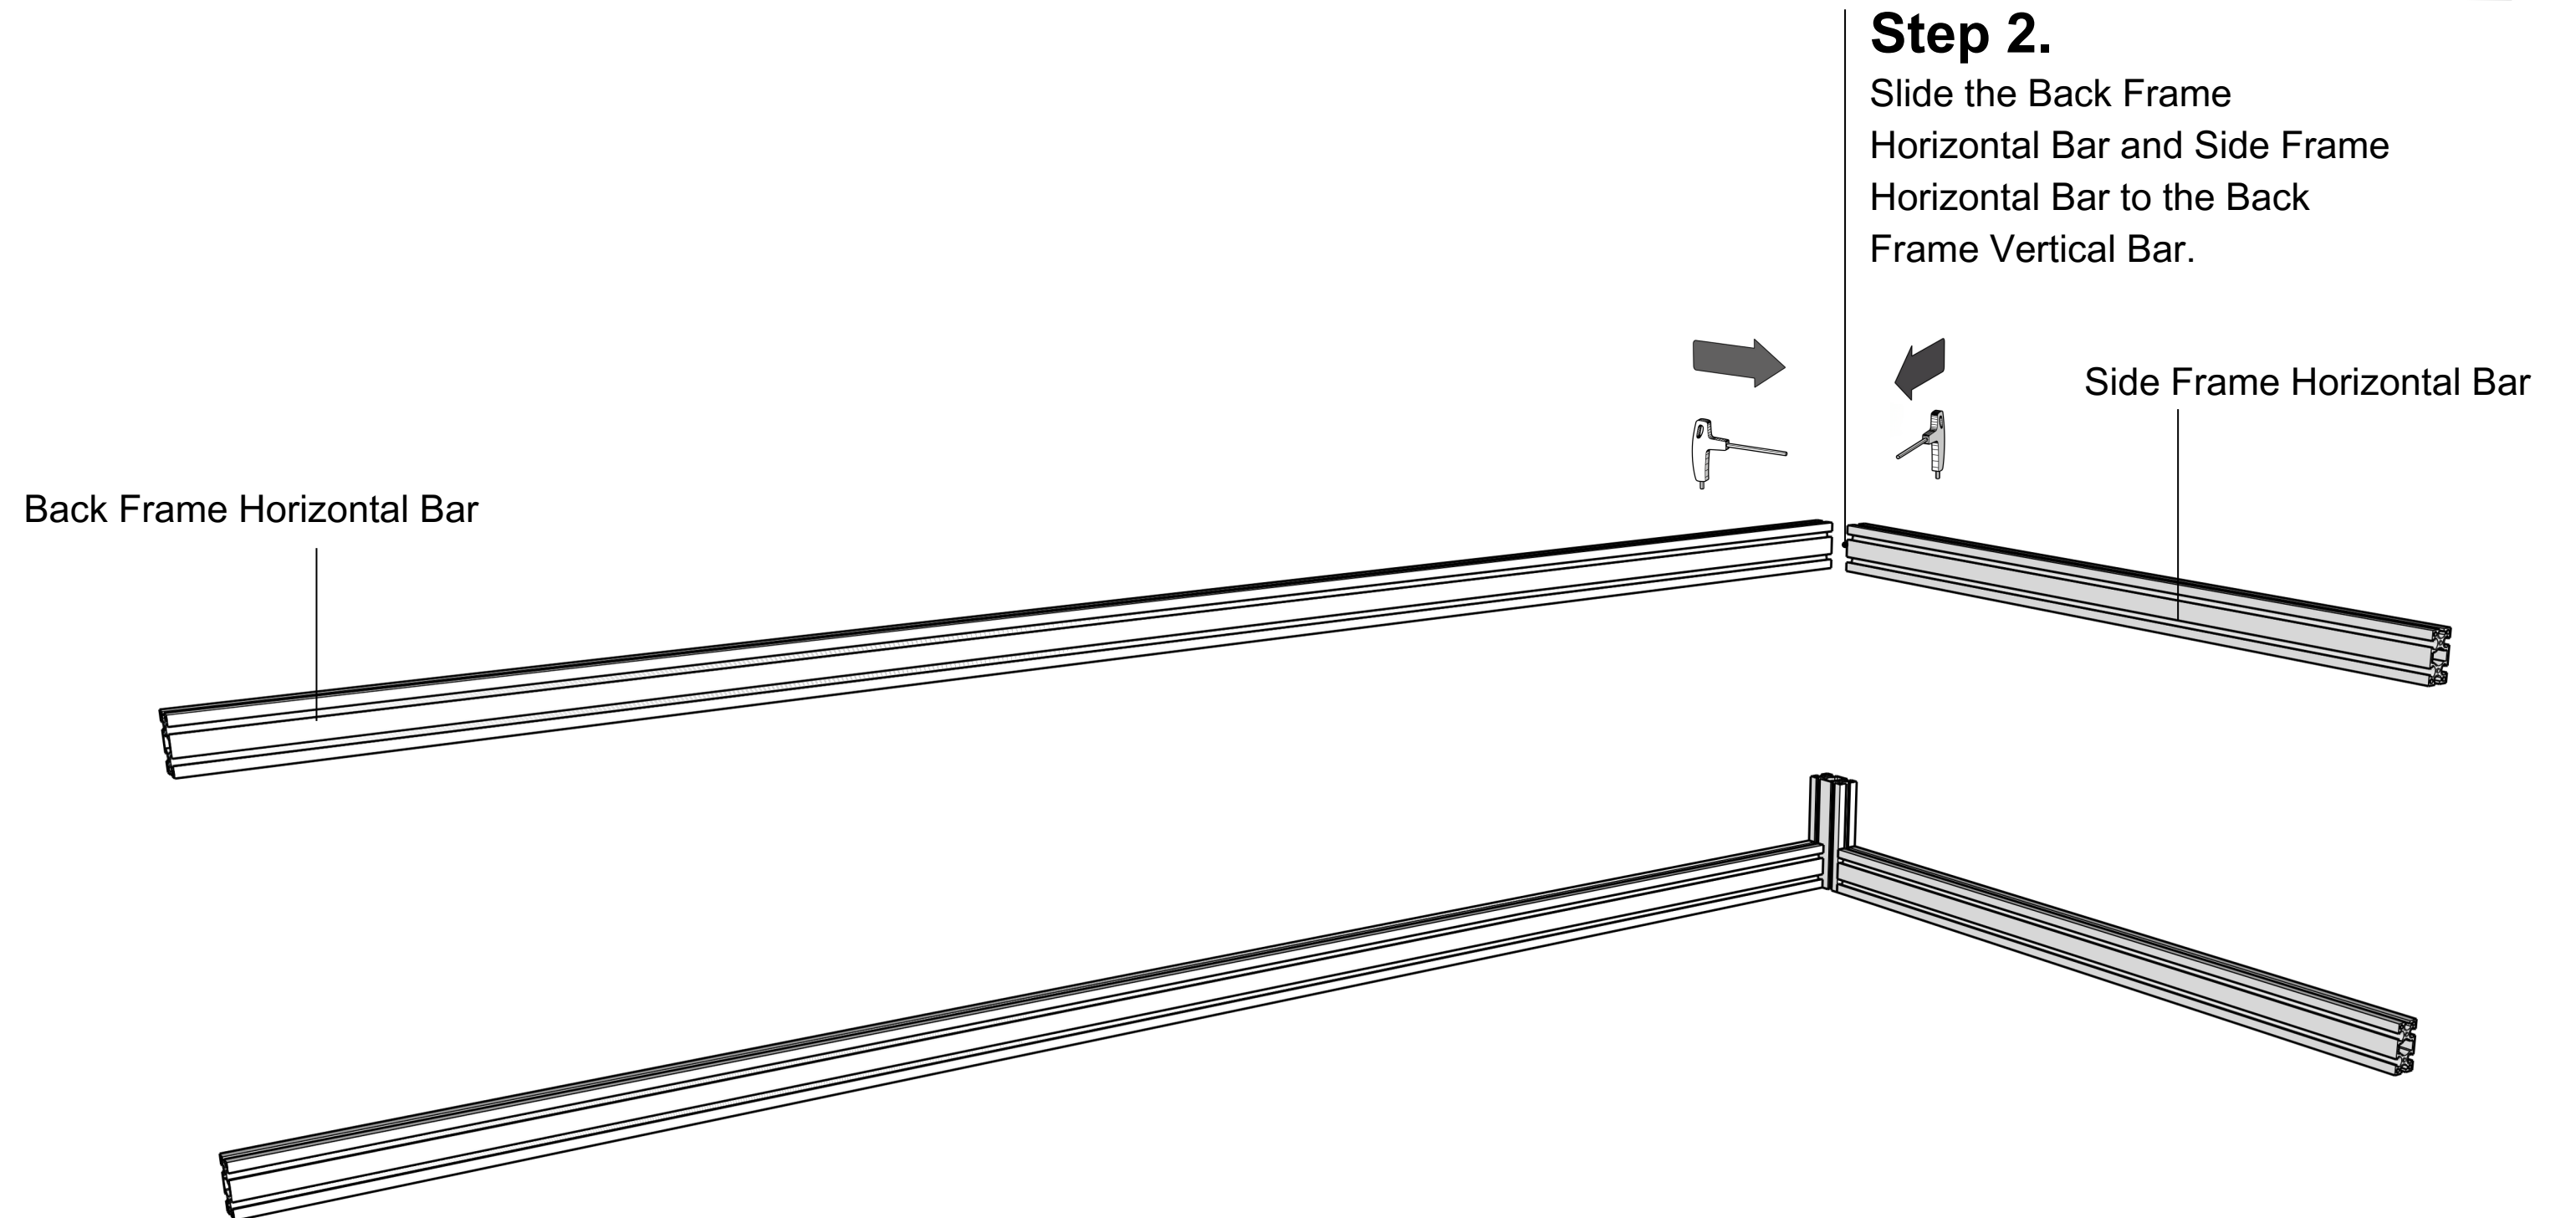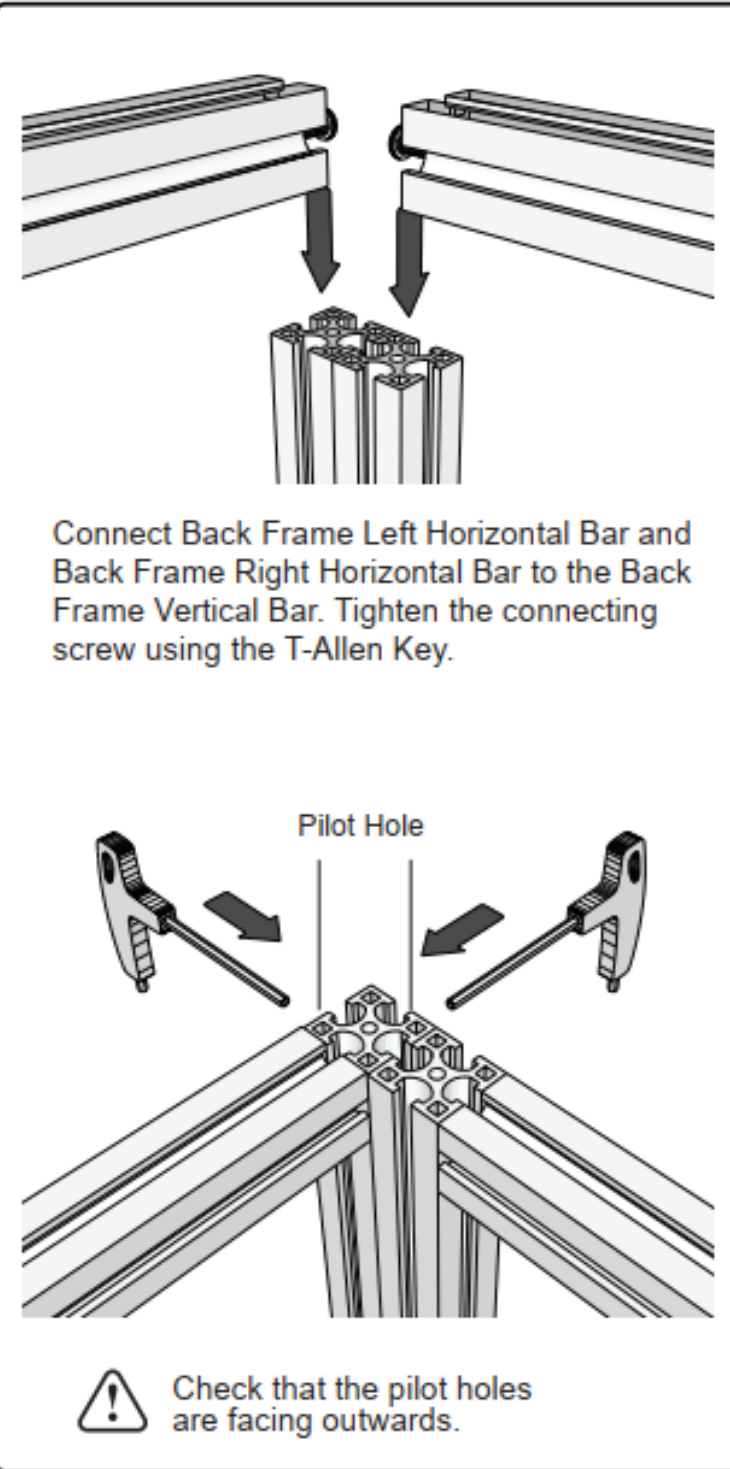

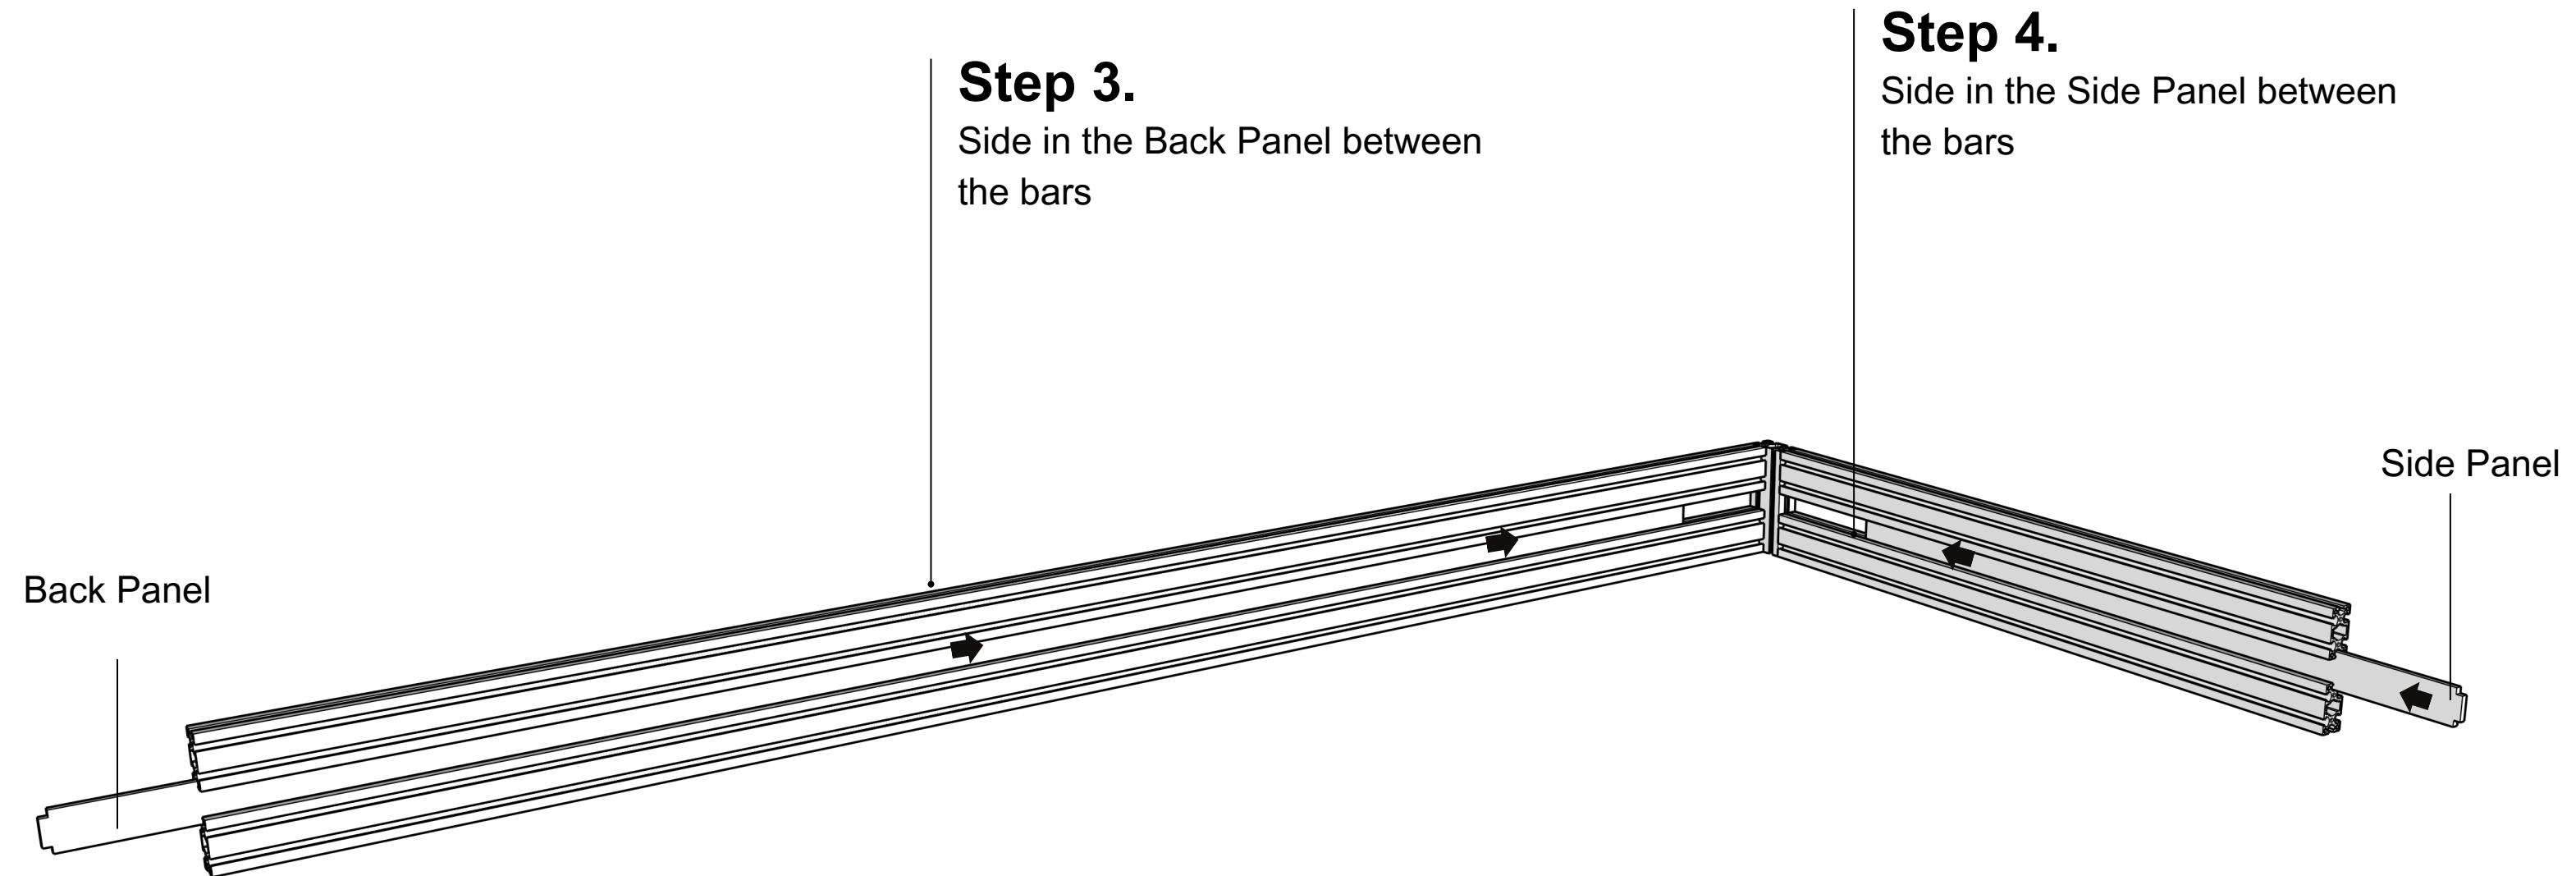


Step 5.

Side in the Back Frame Vertical
Bar between the bars




Step 6.


Side in the Front Frame Vertical
Bar between the bars

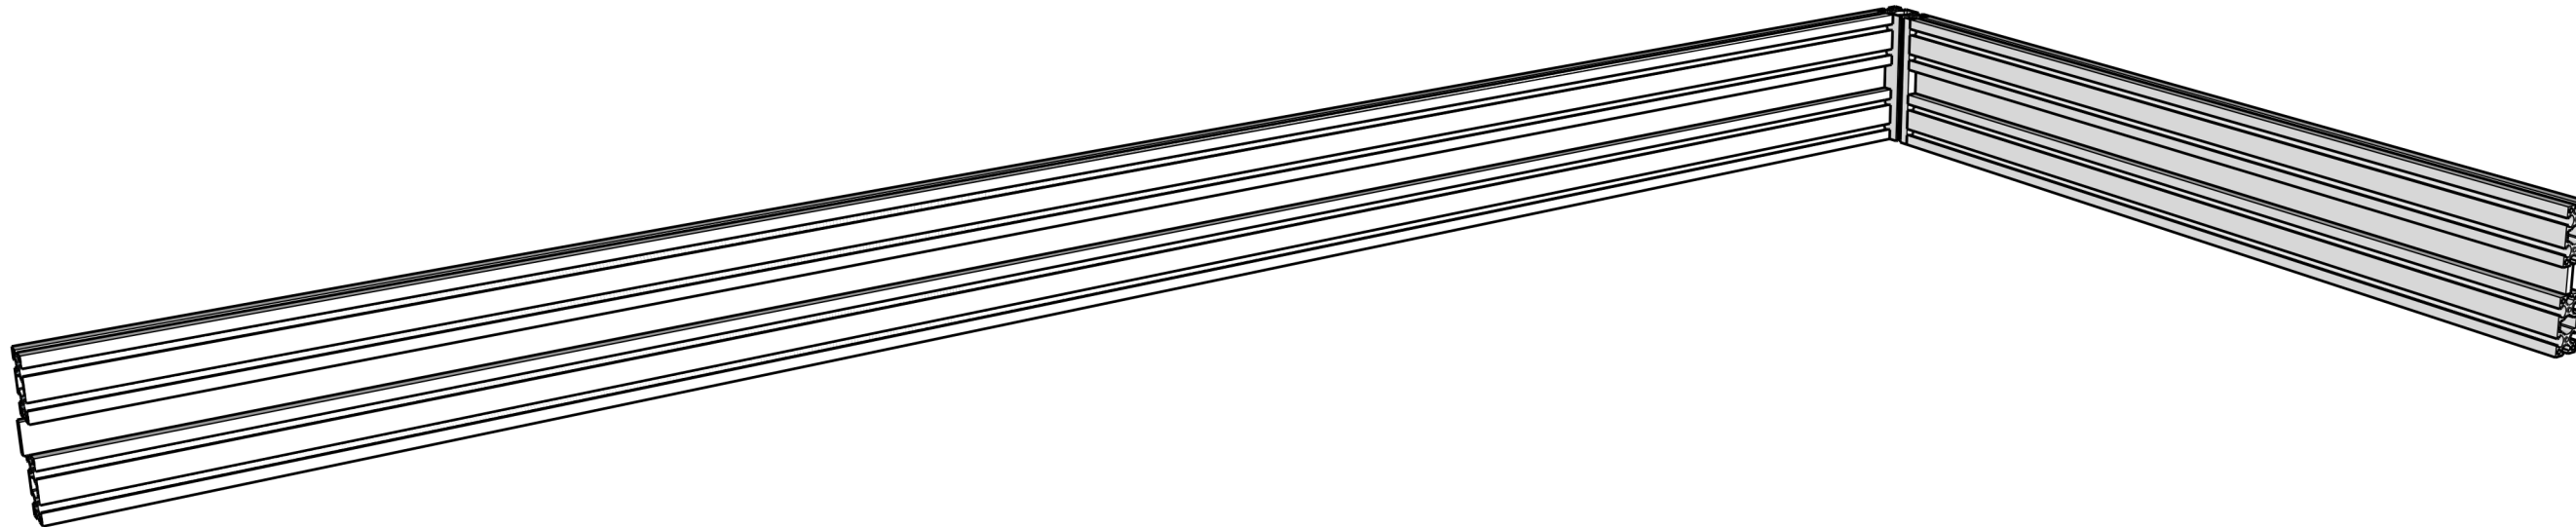

Step 7.


Side in two Front Frame
Horizontal Bars to Front Frame
Vertical Bar

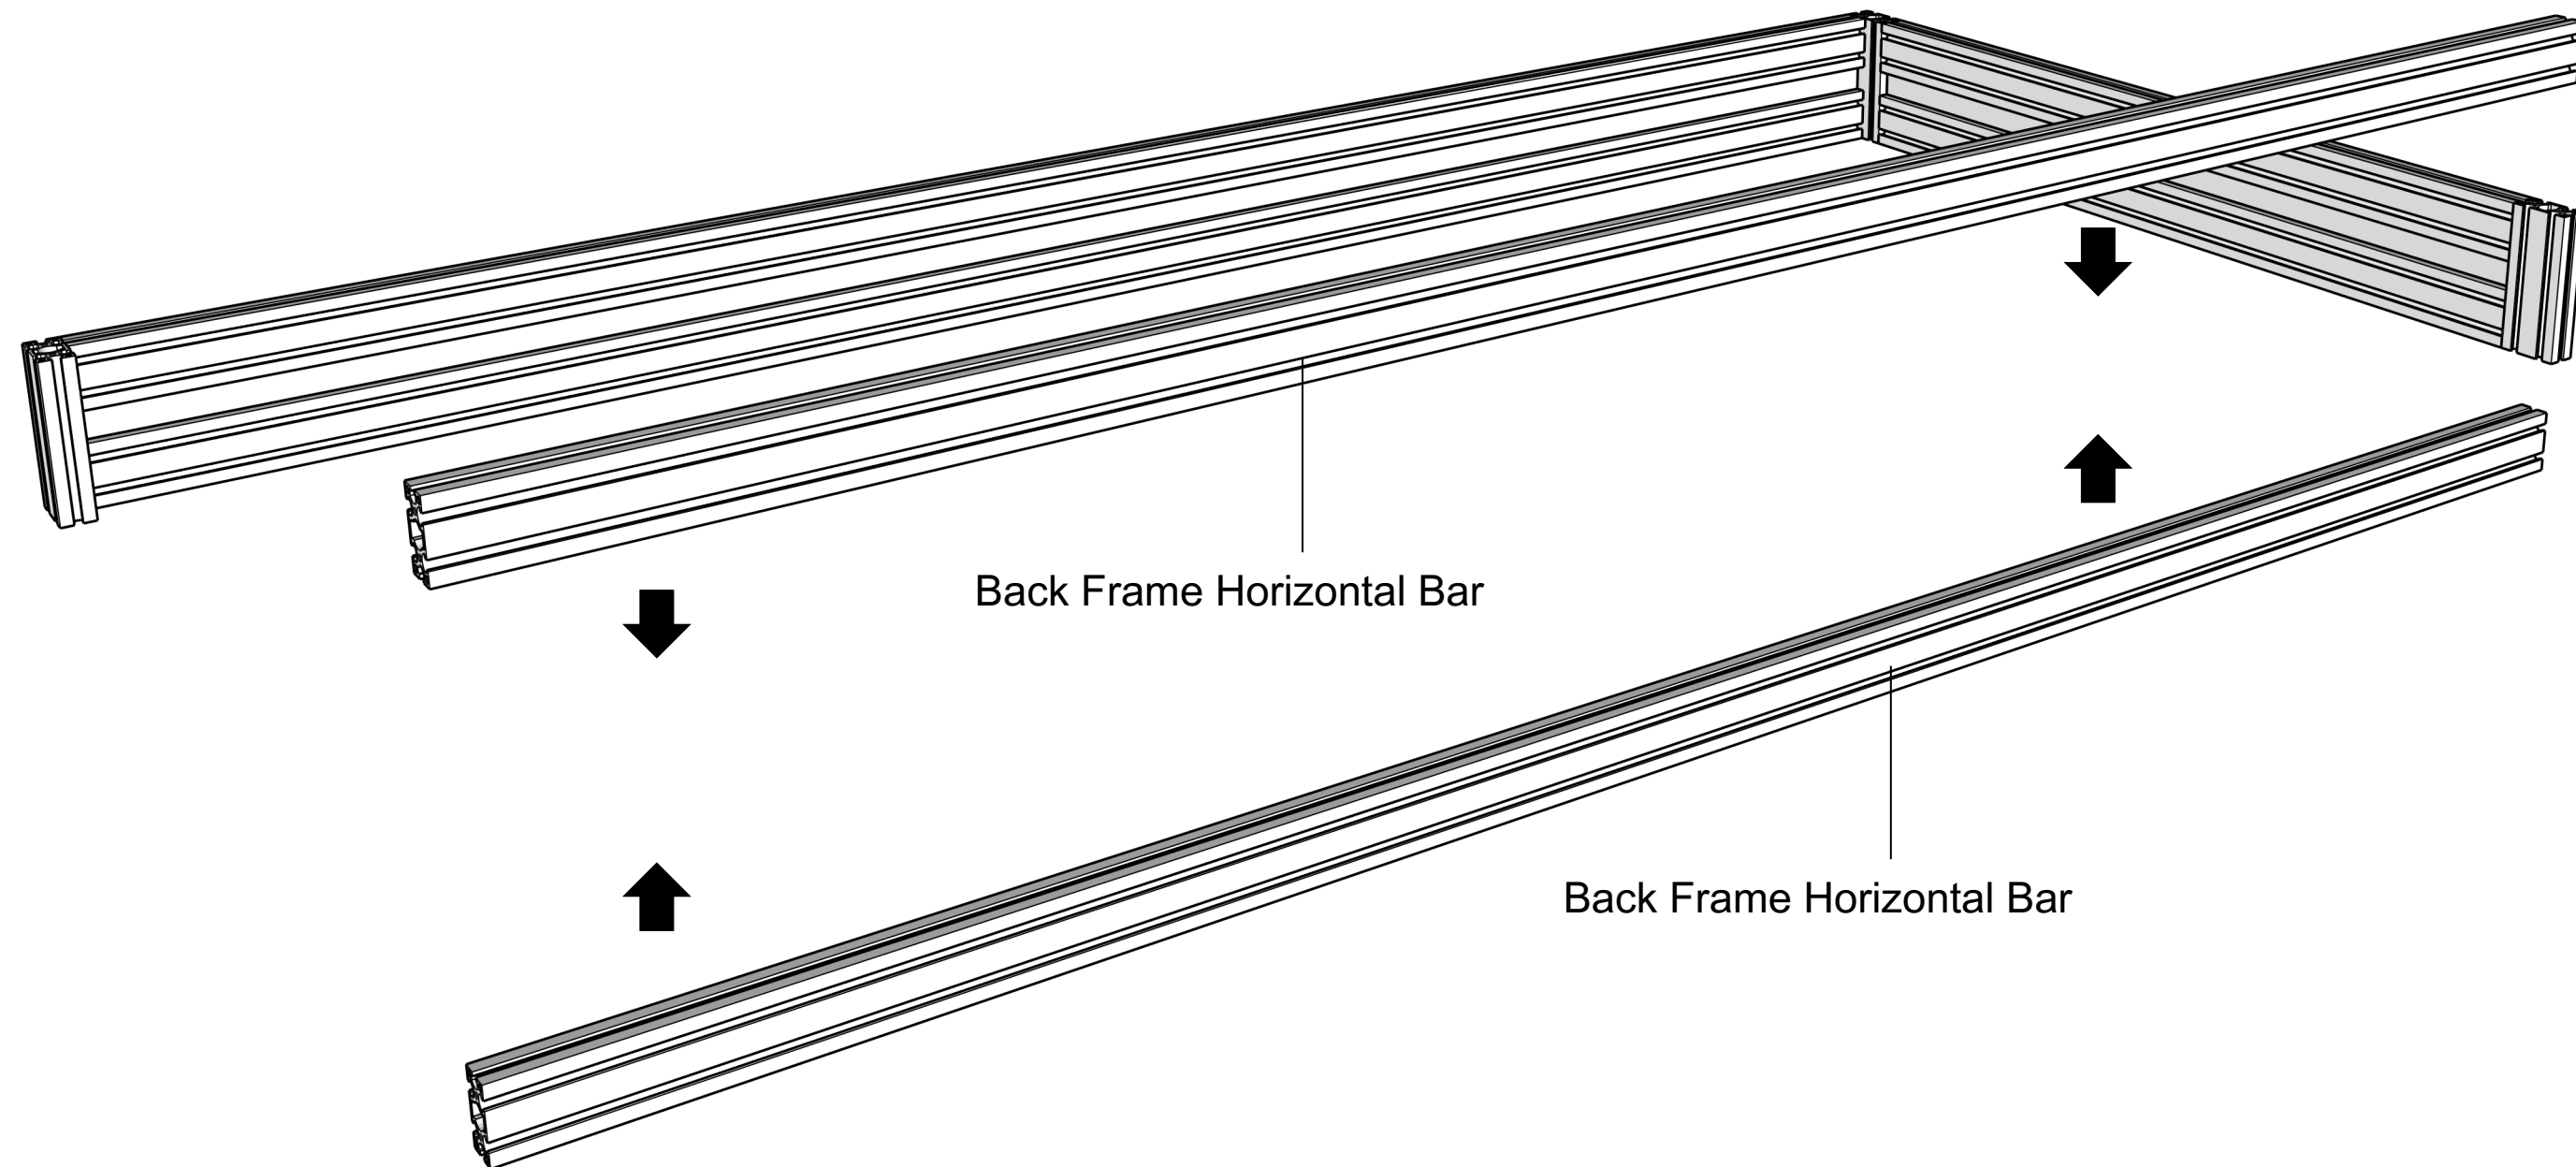

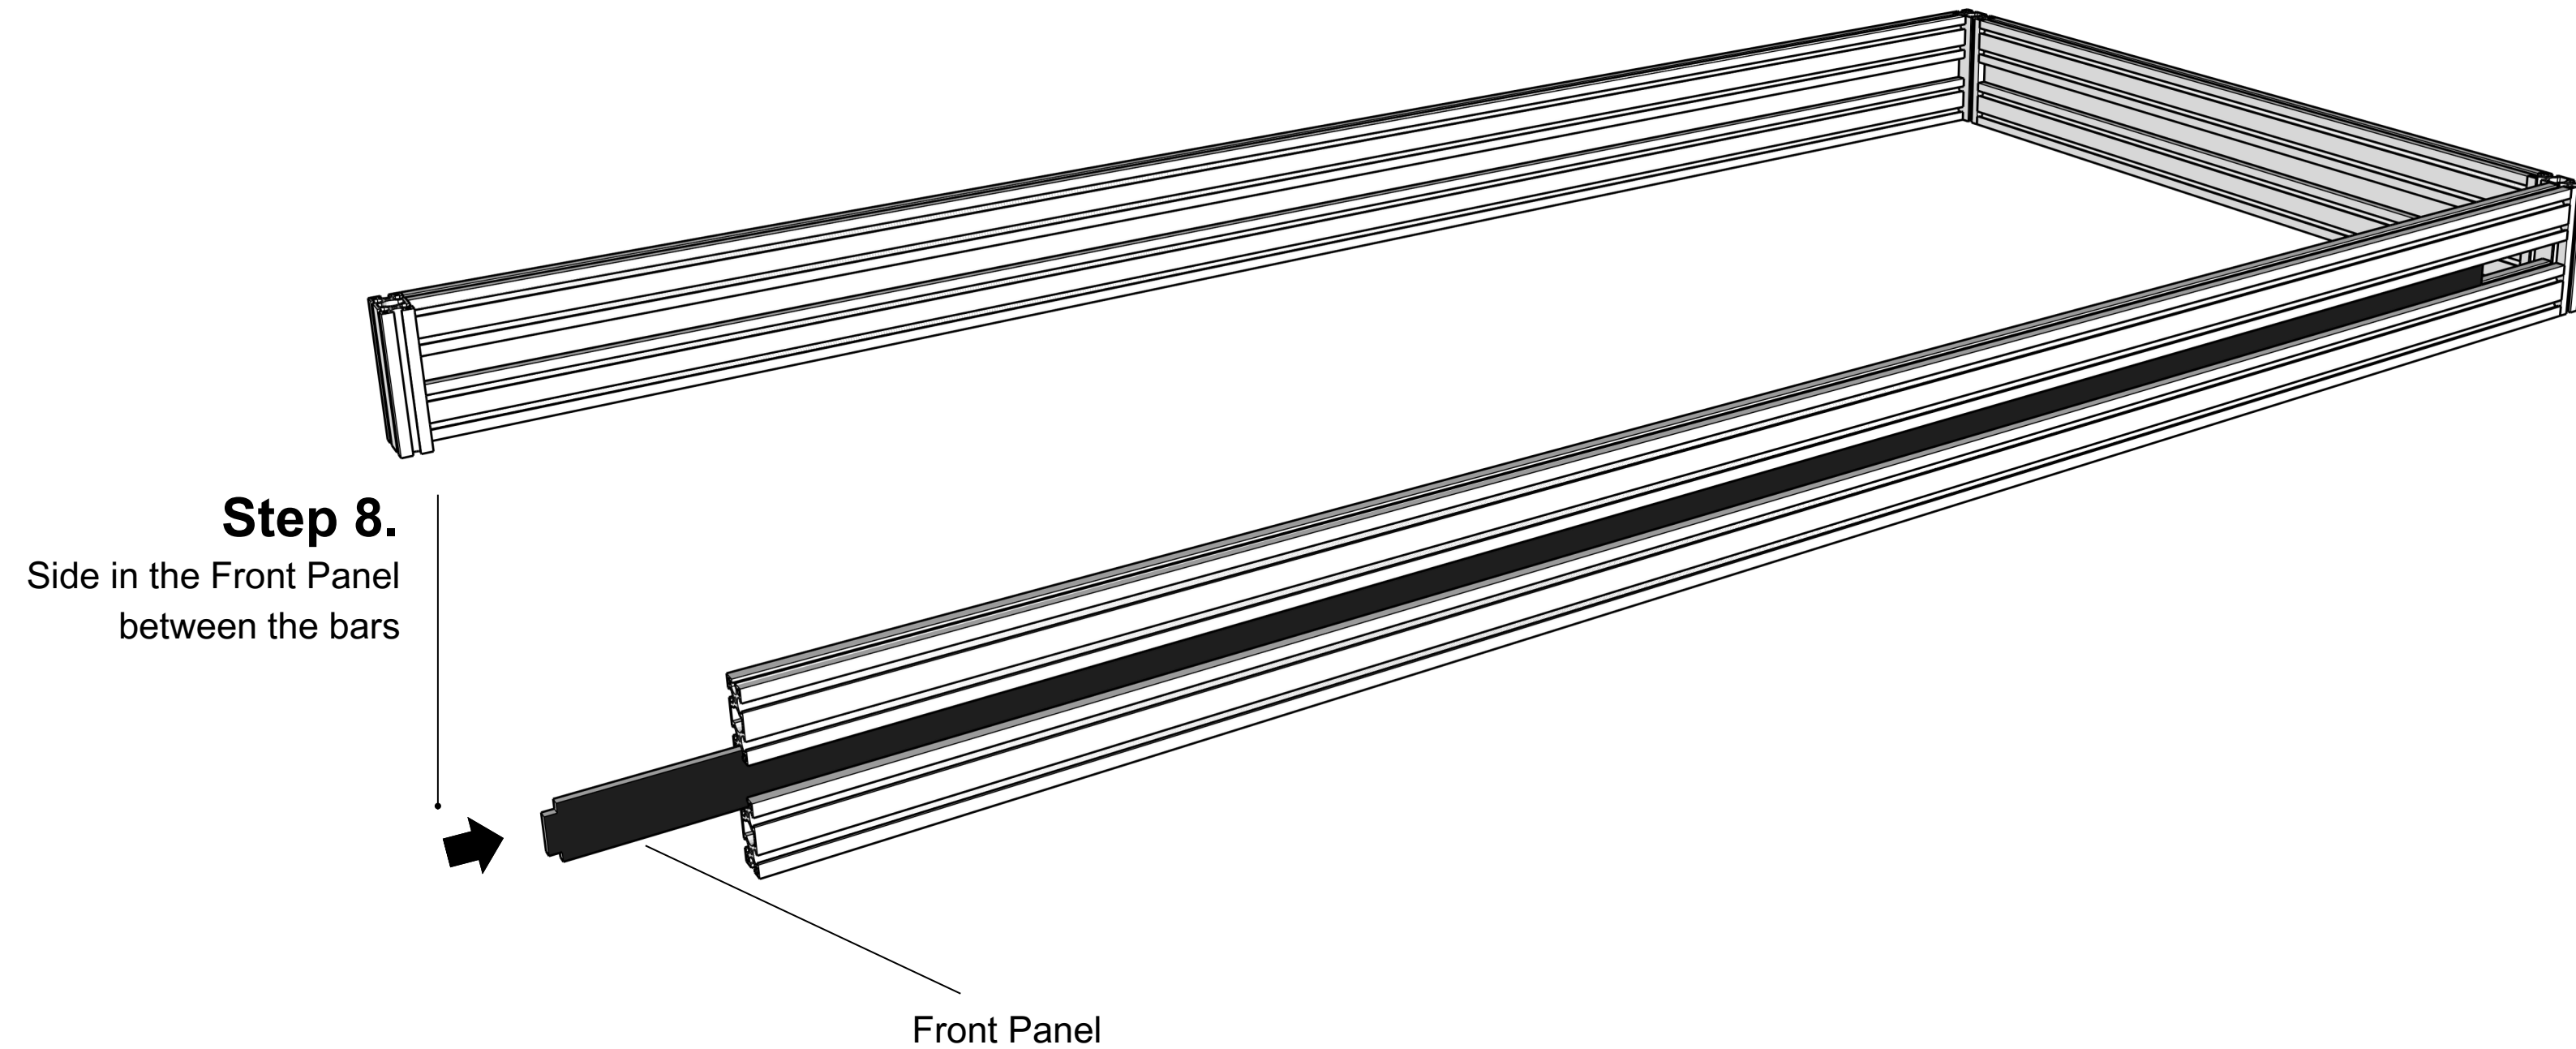


Step 9.

Side in the Front Frame Vertical
Bar

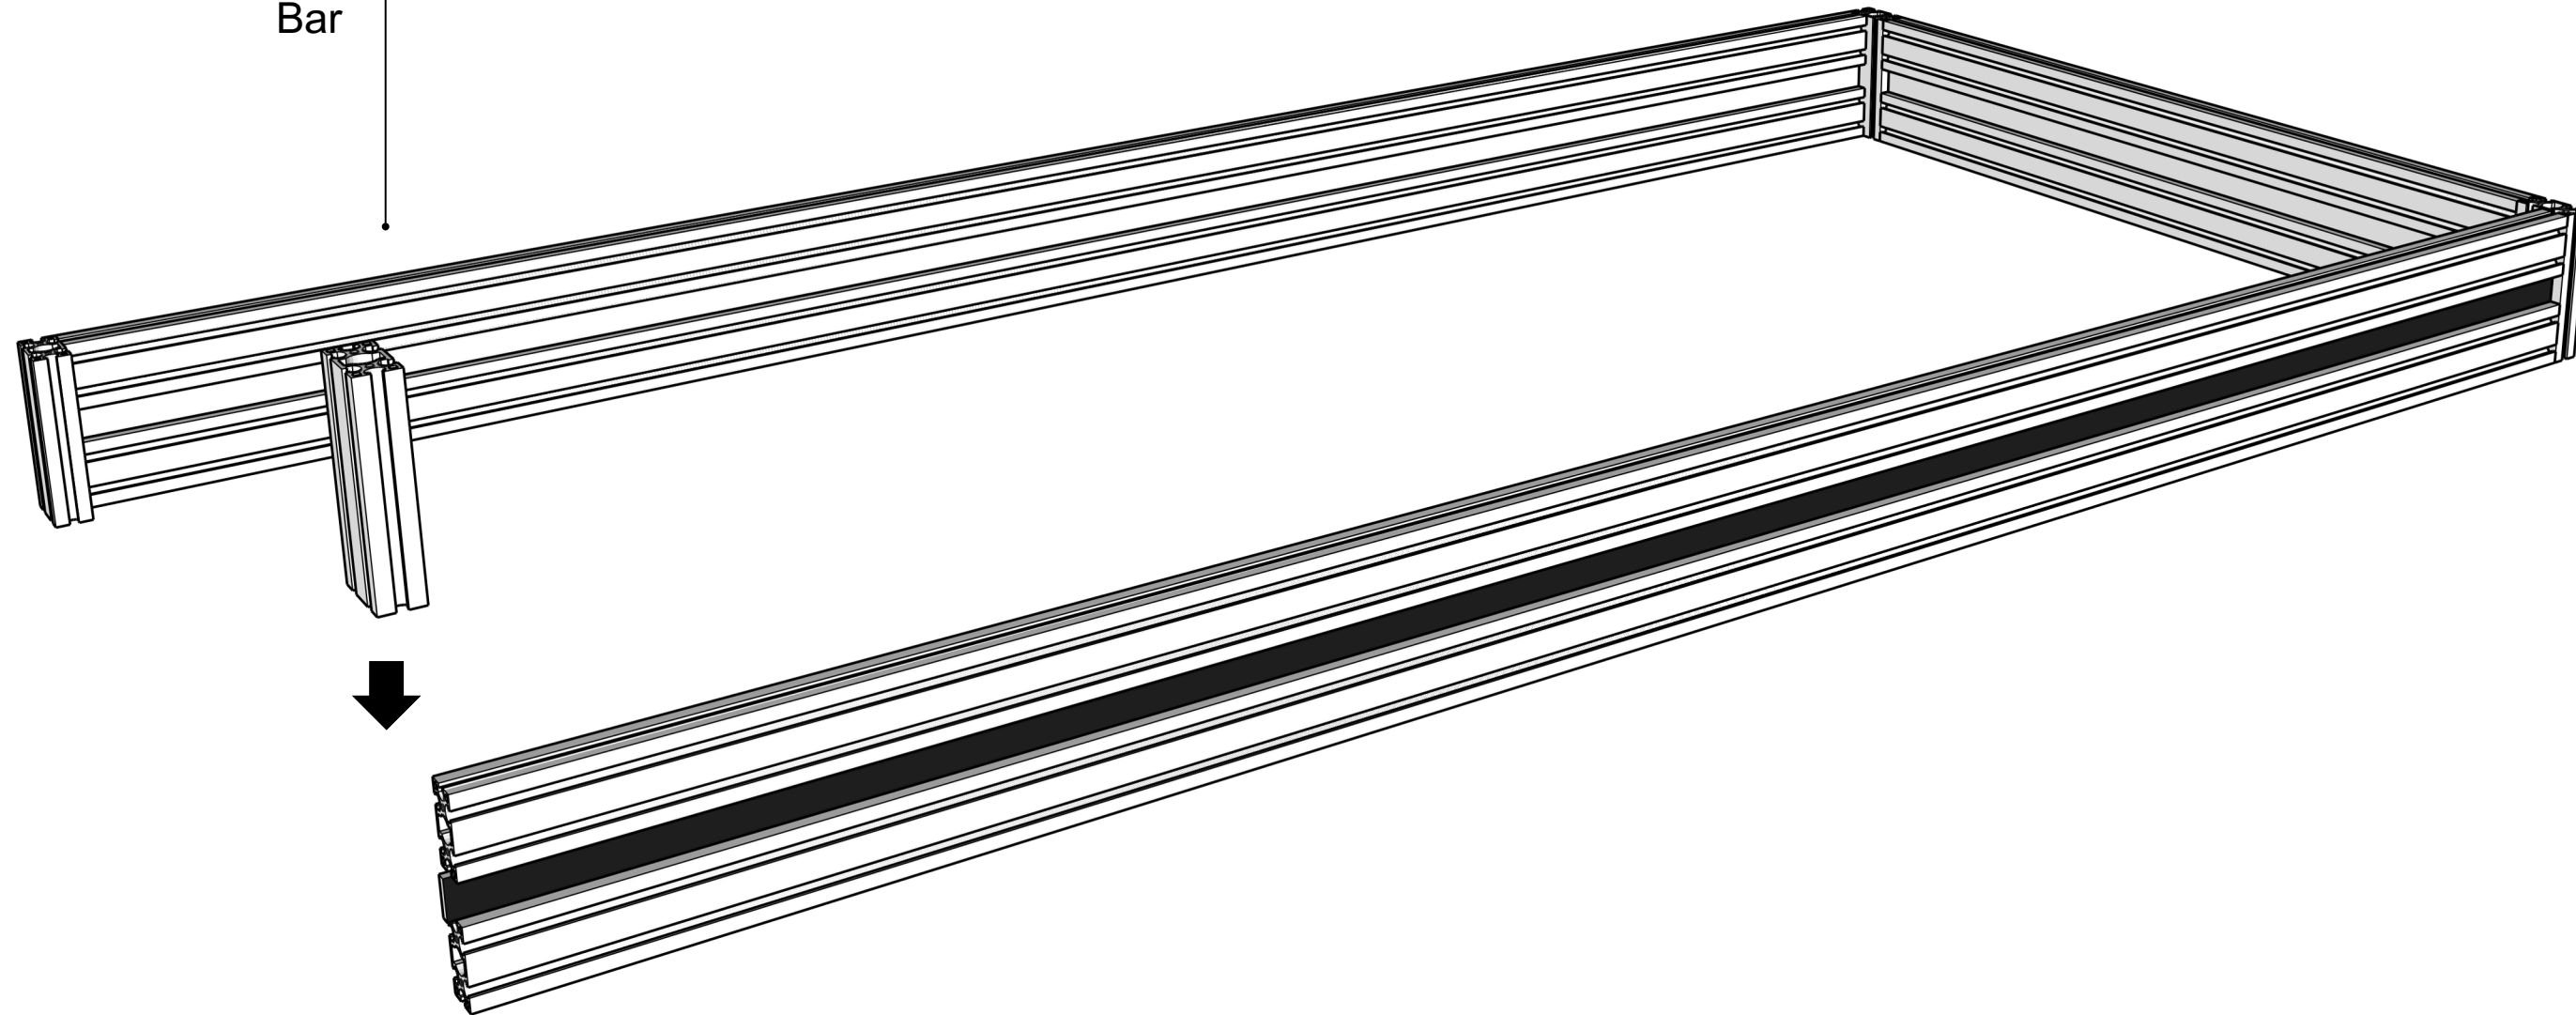


Step 10.

Side in the Side Frame Vertical
Bar between the bars

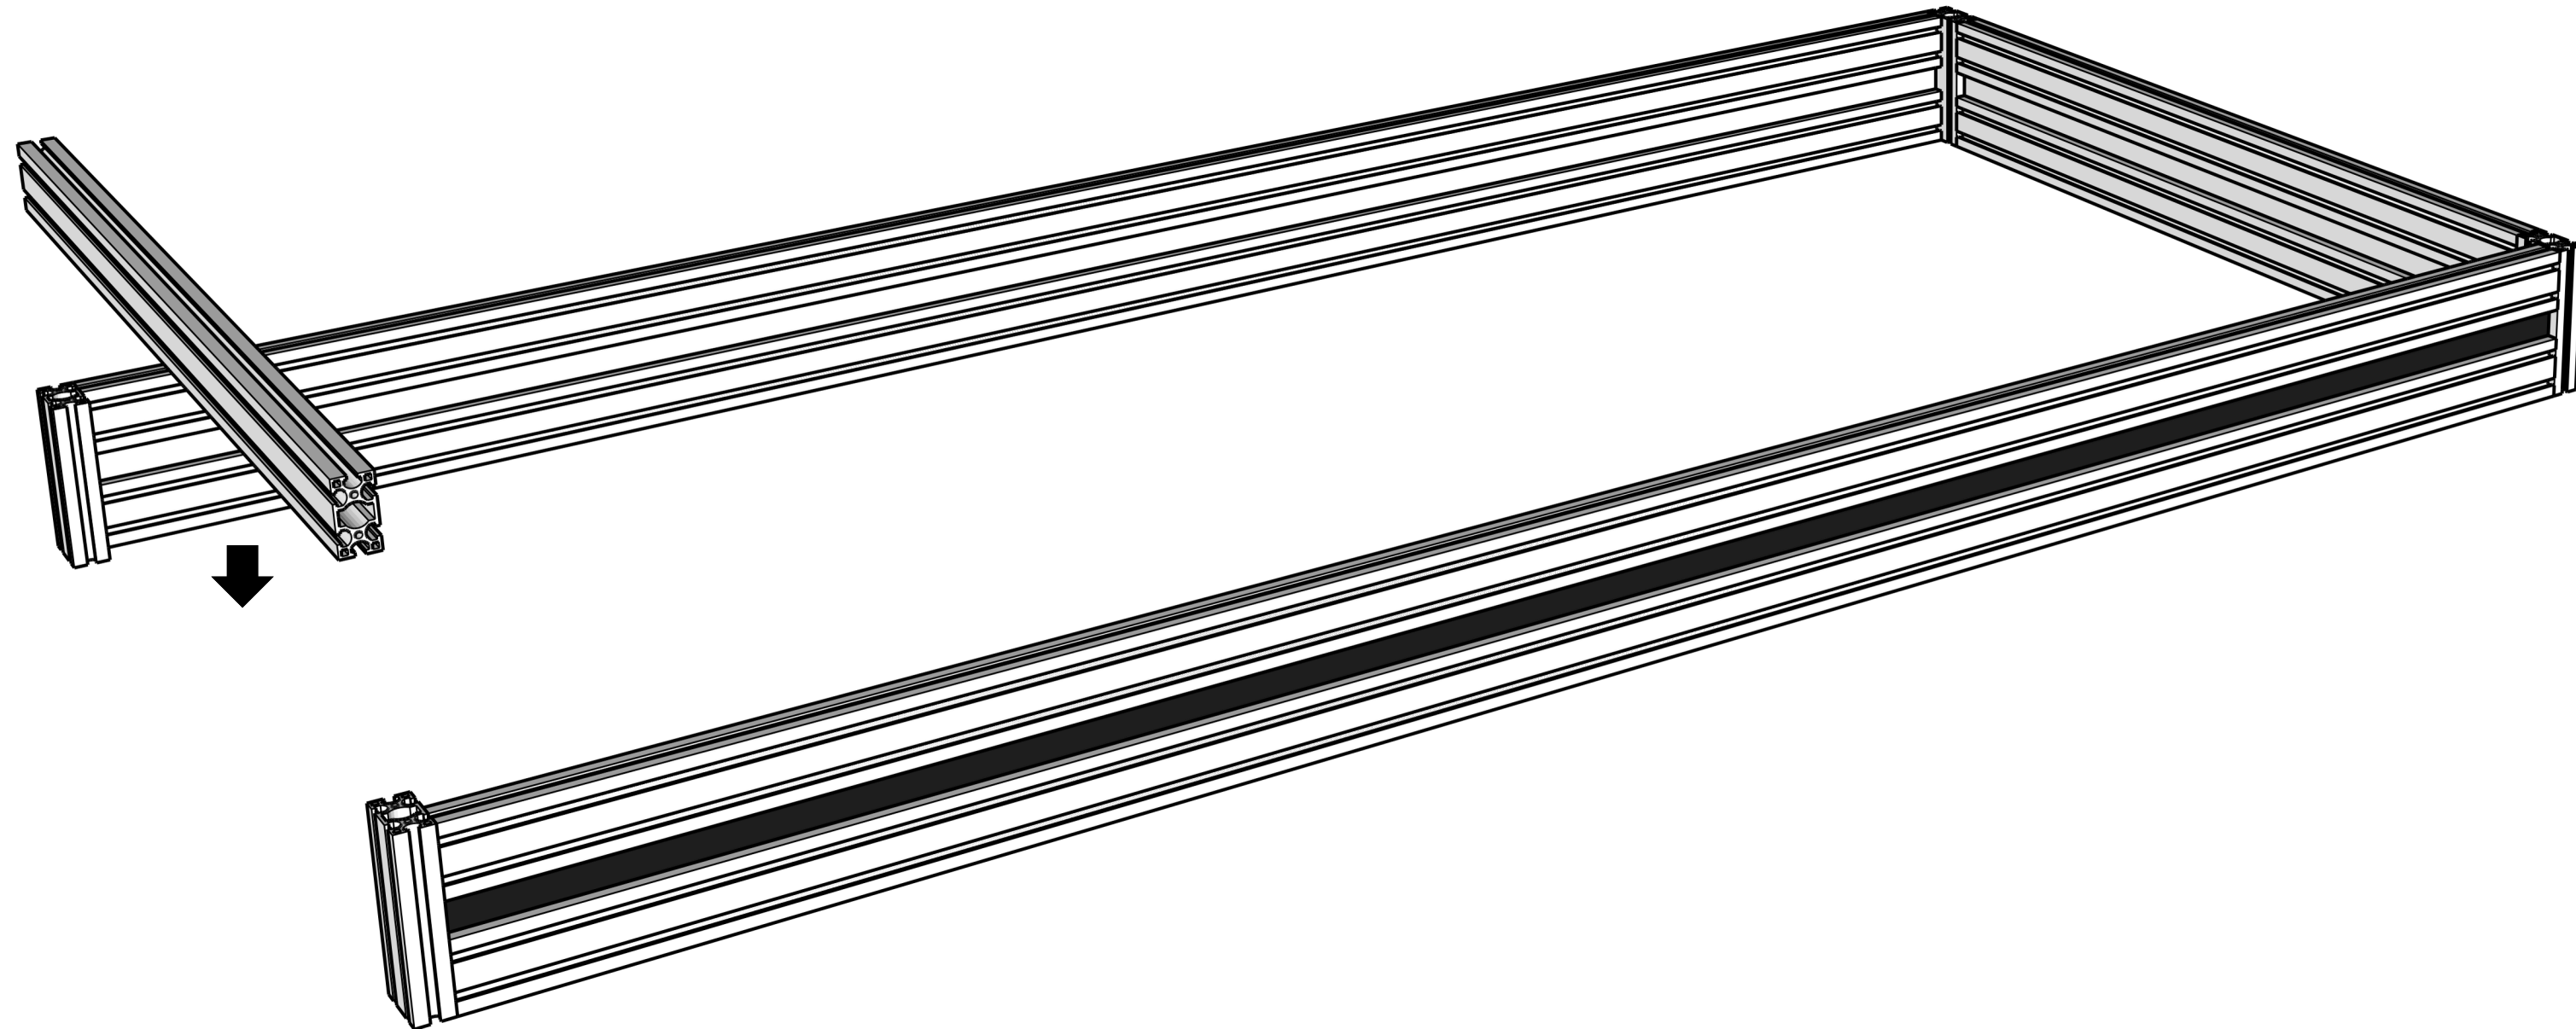


Step 11.

Side in the Side Panel on Side
Frame Vertical Bar

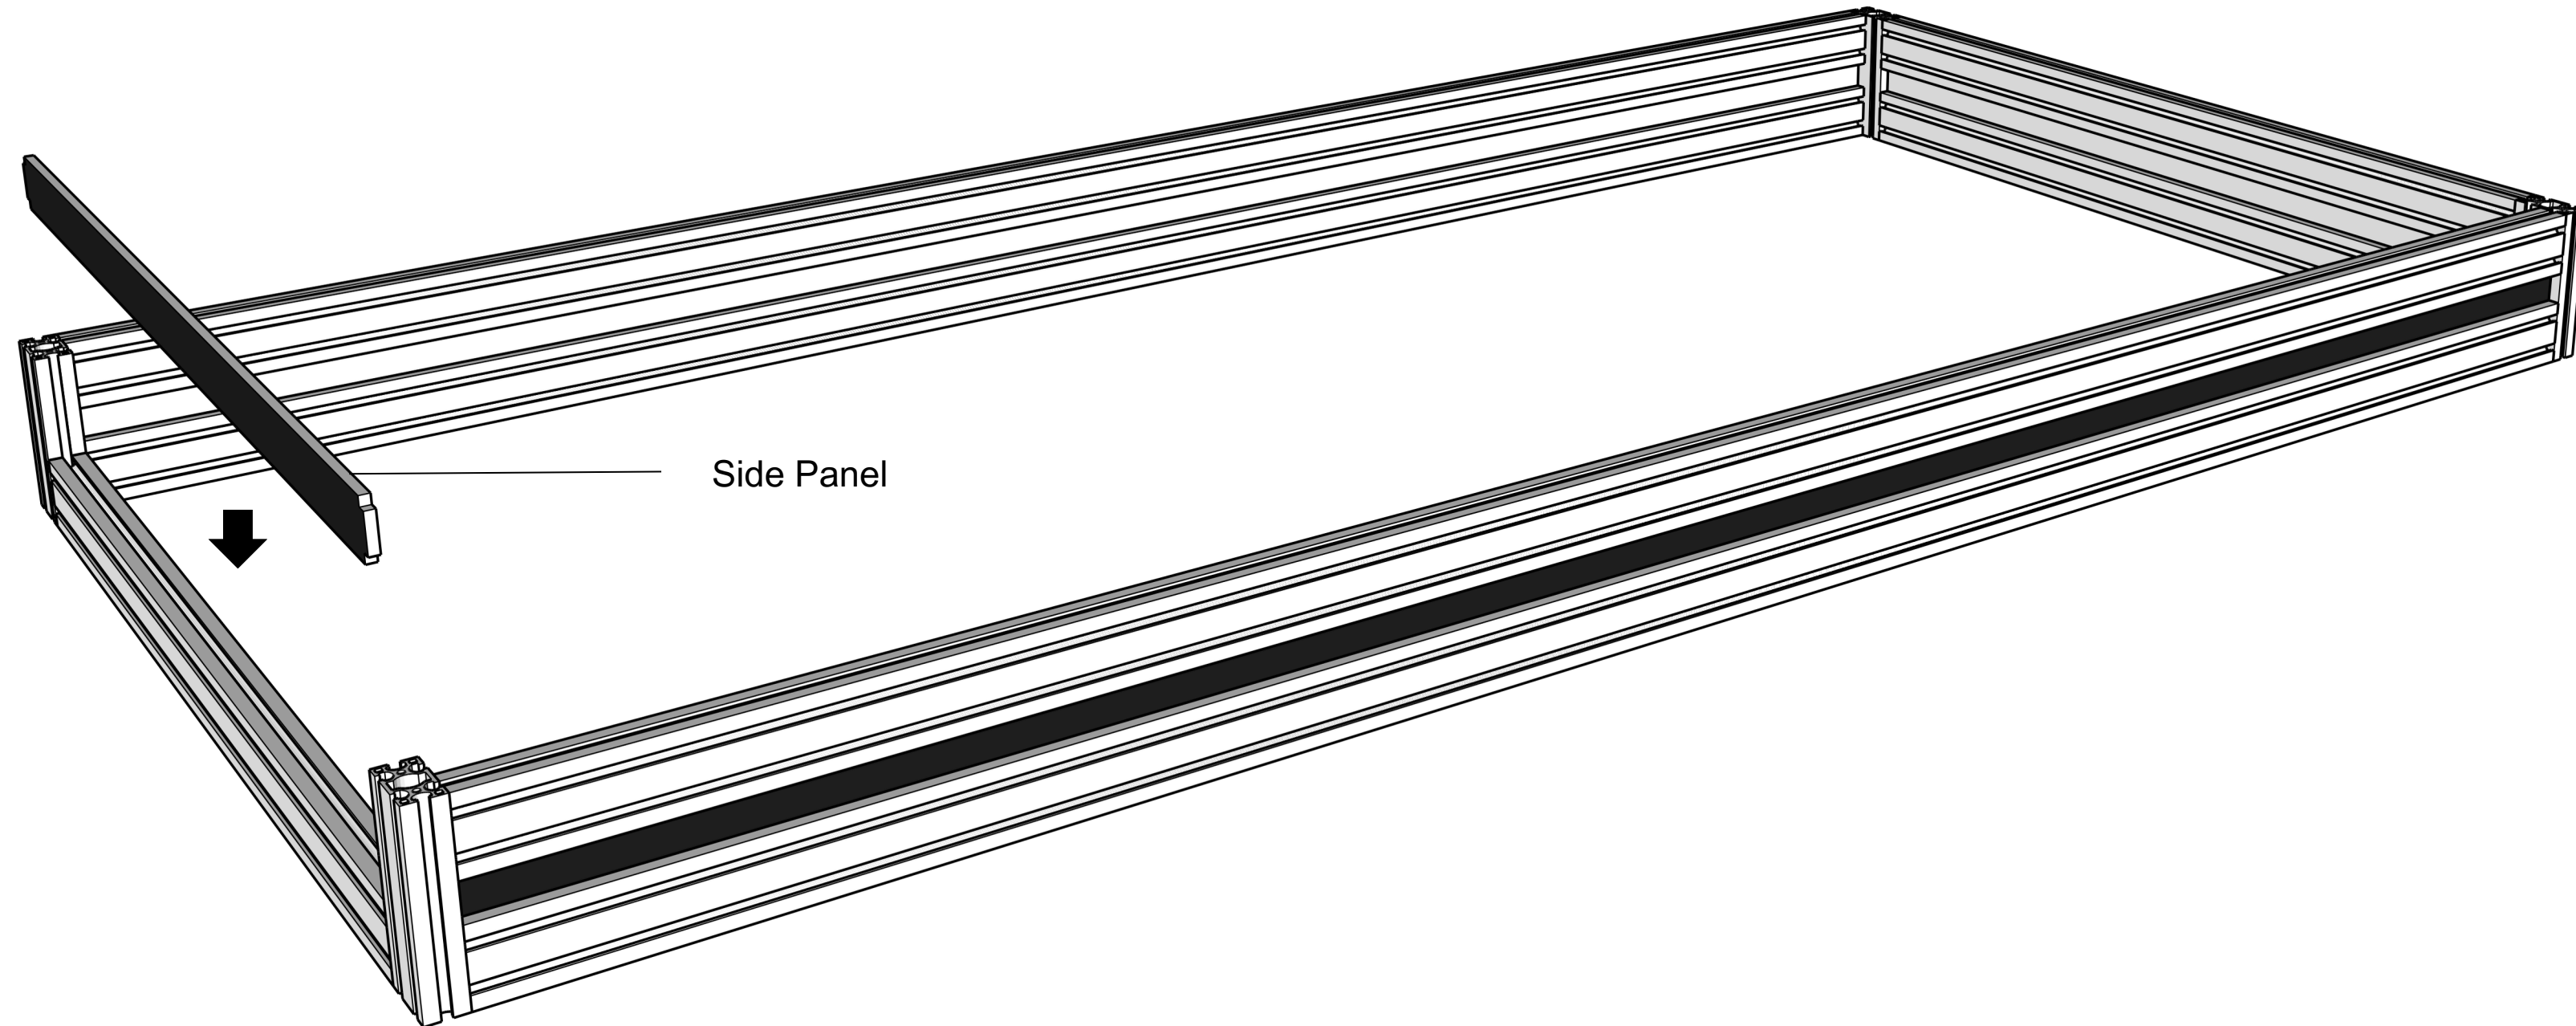


Step 11.

Side in the Side Panel on Side
Frame Vertical Bar

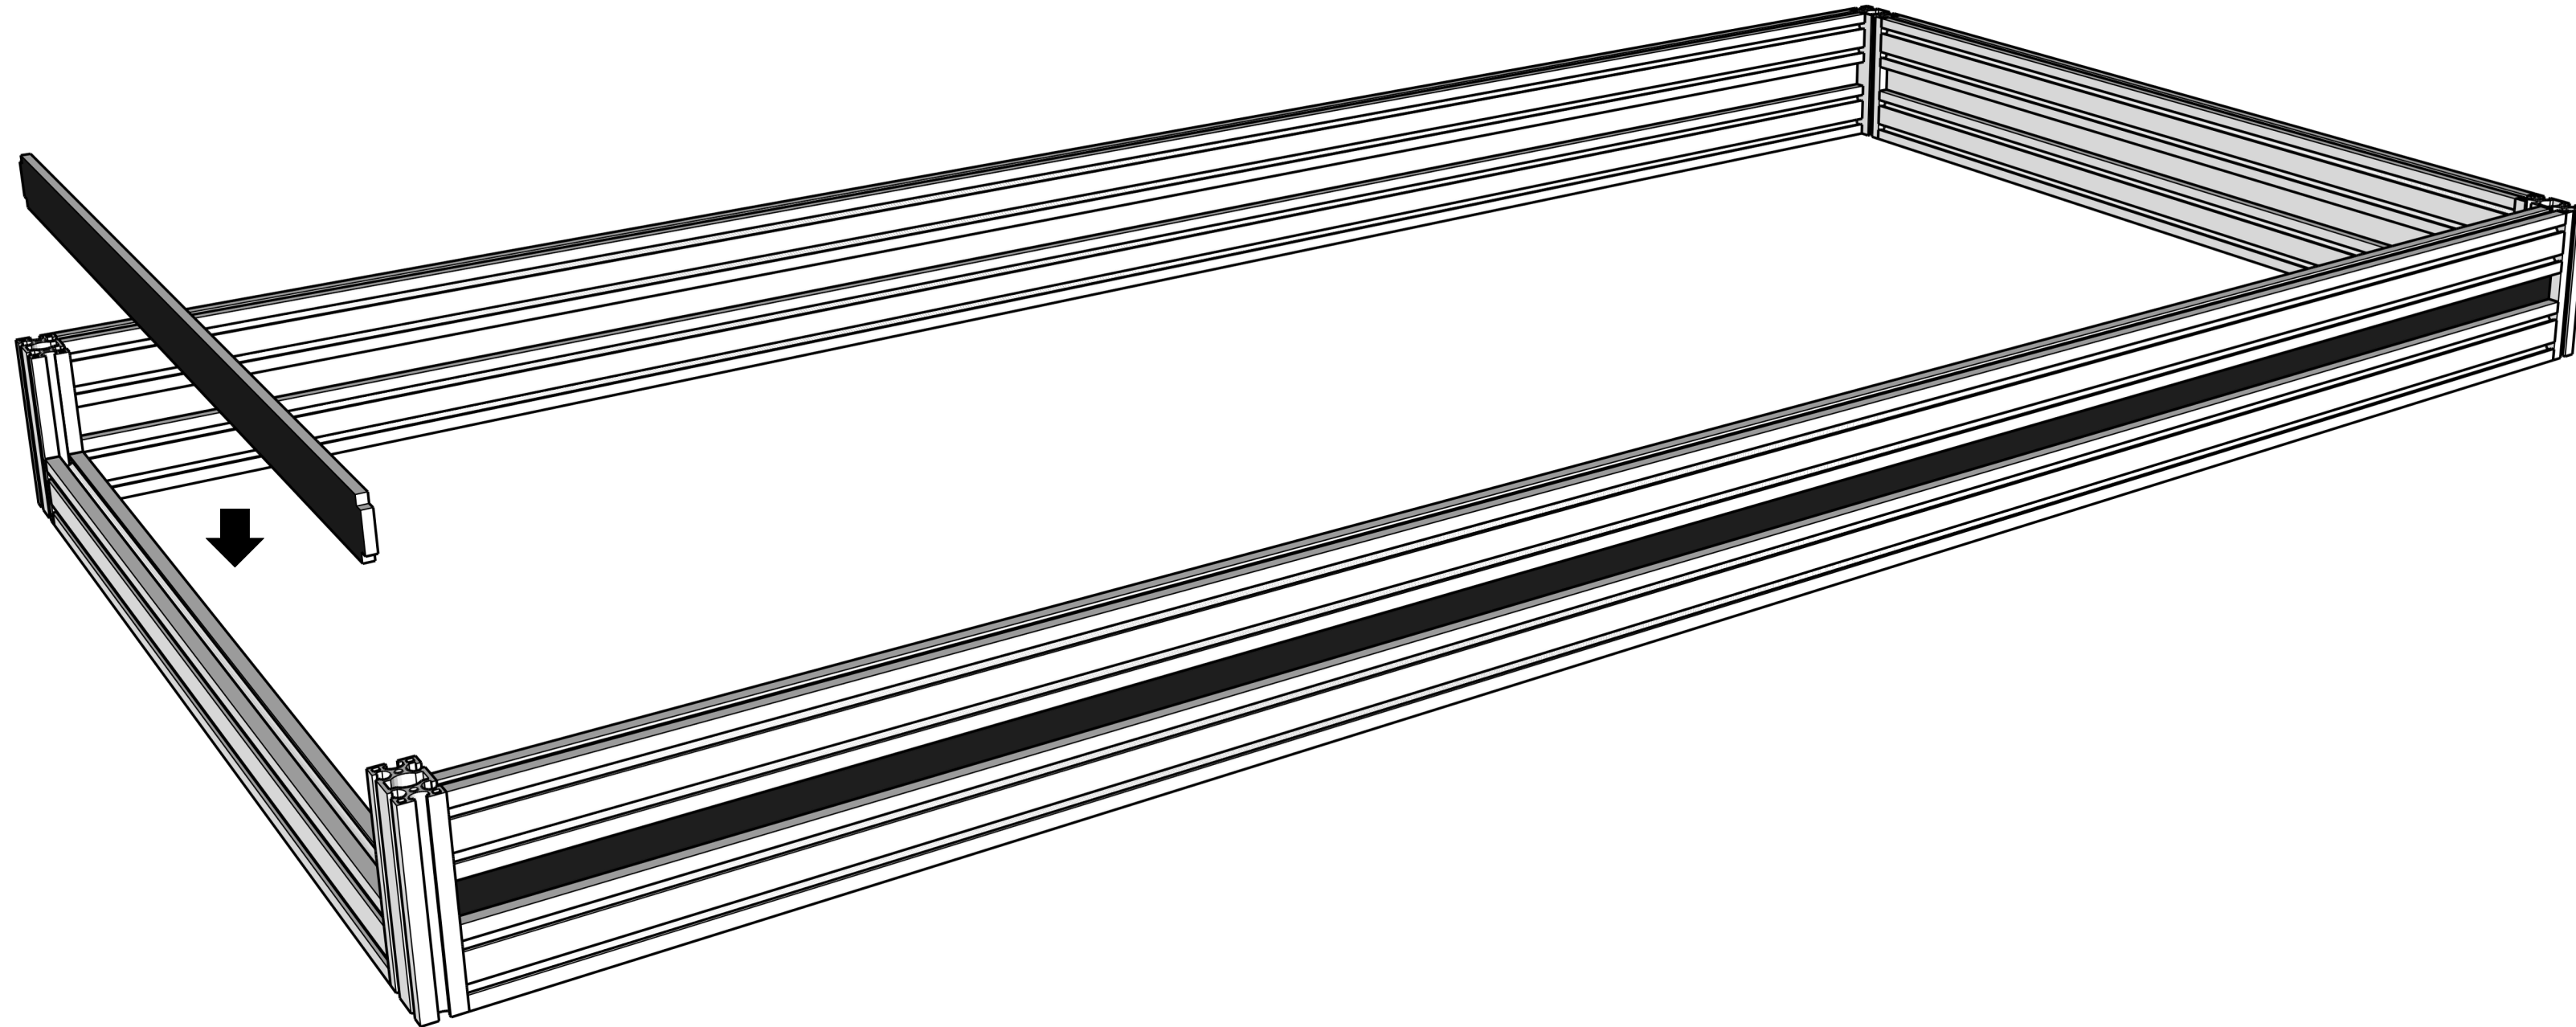

Step 12.

Slide the Side Frame Vertical
Bar

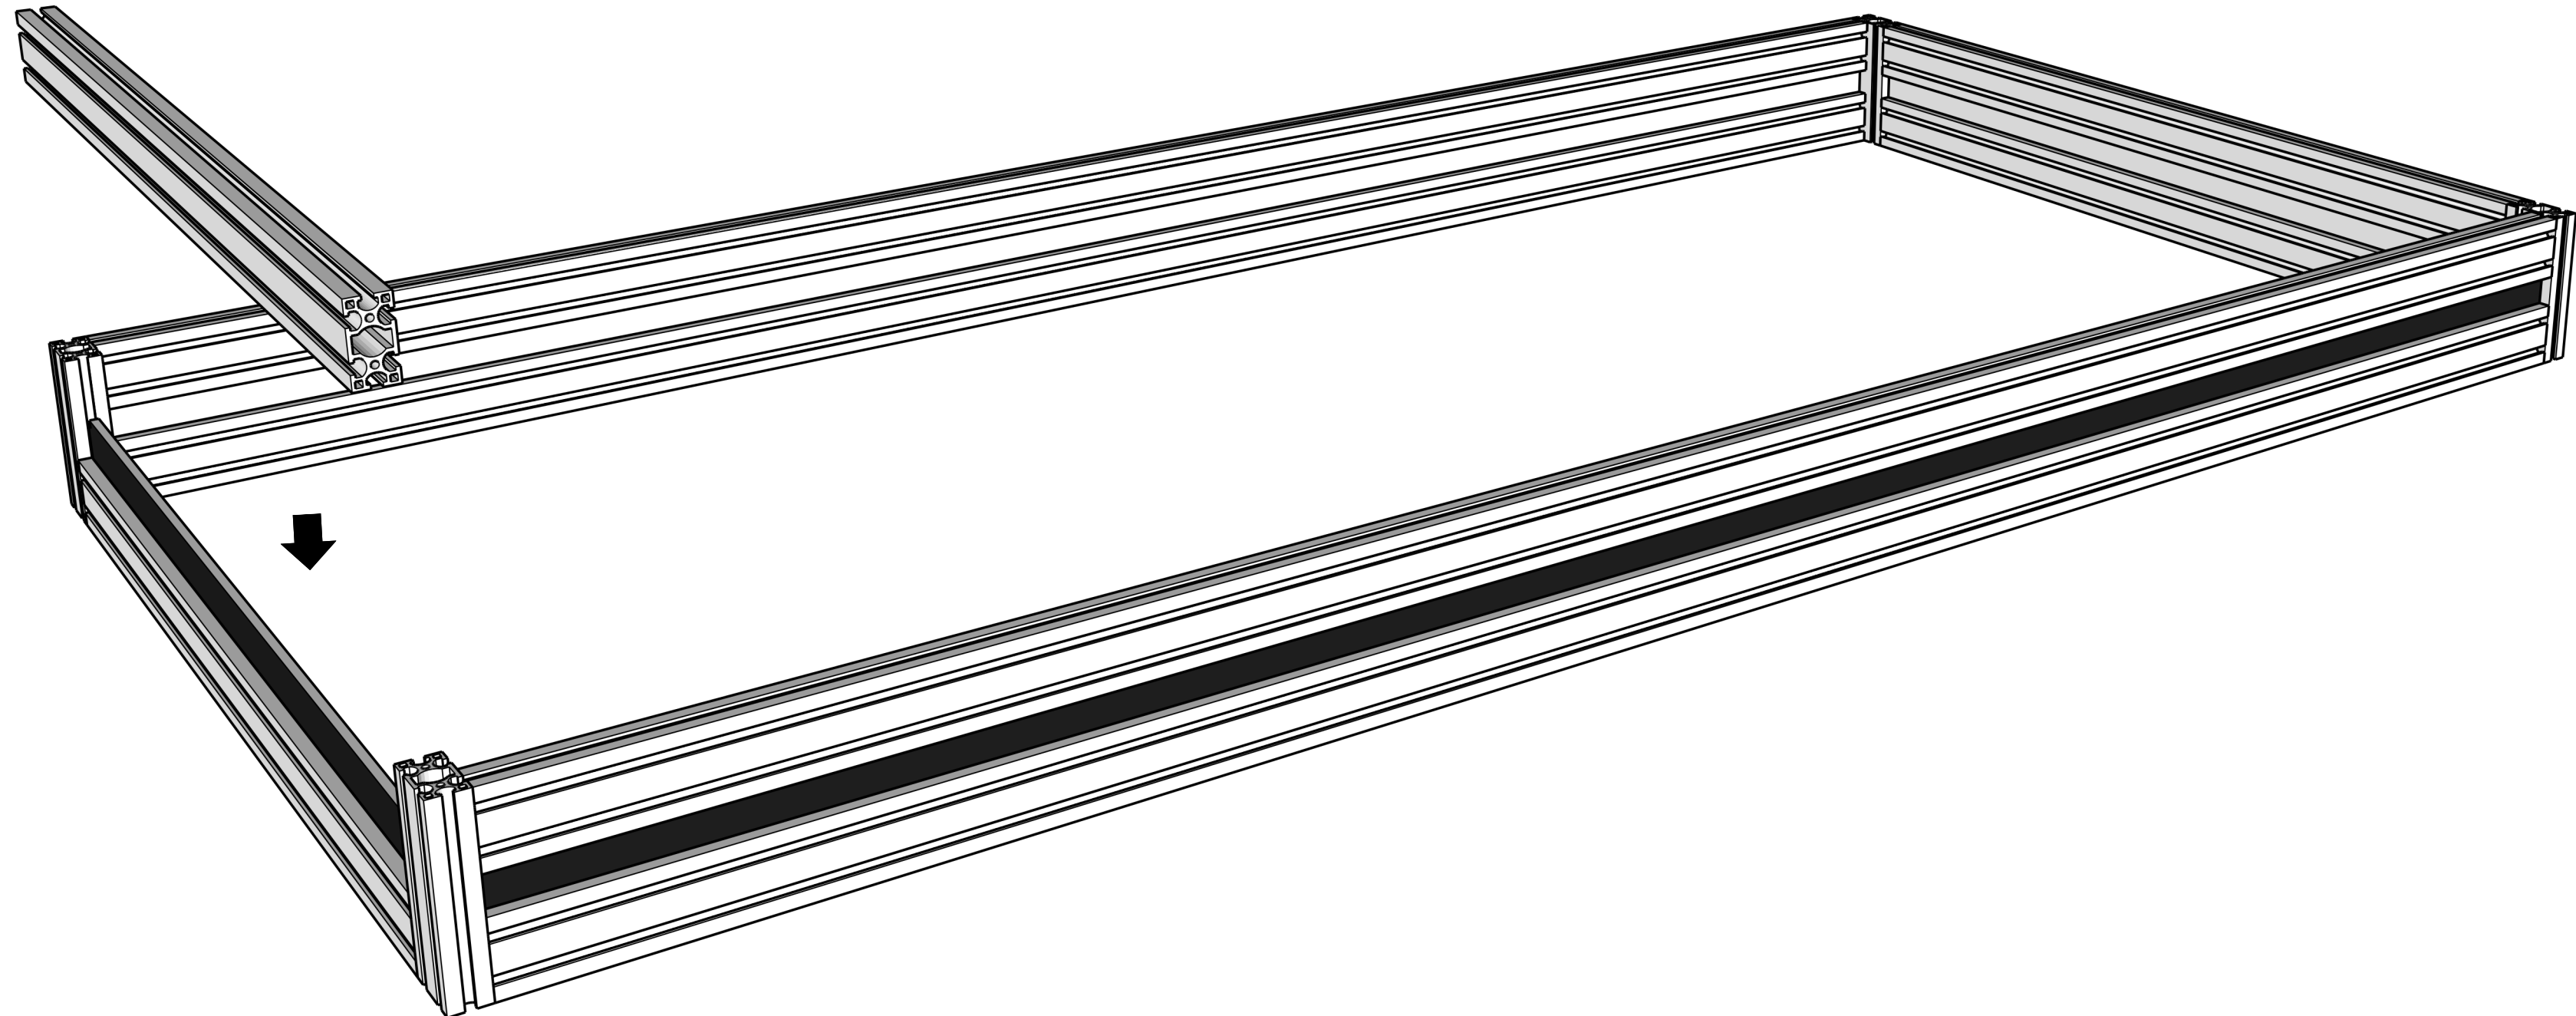

Step 13.

Insert Front/ Back Frame Foot
Pad to bottom of Front/ Back
Vertical Bar

